

| PROJECT | CUSTOMER | VEHICLE |
|------------------|----------|----------------|
| X'trapolis-PRASA | PRASA | 241 – M3 – VFT |

RTR Vehicle Functional Static Testing TS241 M3 Report
 GIB0000007049



| | CREATED | VERIFIED | APPROVED | DISTRIBUTION |
|-----------|---------------------|----------------|-----------------|---|
| Name | Nhlakanipho MASONDO | Sifiso LUKHELE | Kgomotso NKOANA | Confidentiality Category <i>Restricted</i> <i>Project</i> <i>Normal</i> <input type="checkbox"/> <input type="checkbox"/> <input checked="" type="checkbox"/> |
| Date | 23/08/2024 | 23/08/2024 | 23/08/2024 | Control Category <i>Controlled</i> <i>Not Controlled</i> <input checked="" type="checkbox"/> <input type="checkbox"/> |
| Signature | | | | Language EN |

This report has been automatically generated from TES version 1.

Table of modifications

| Rev | Date | Modifications Content | Writer |
|-----|------------|-----------------------|---------------------|
| A0 | 23/08/2024 | Creation | Nhlakanipho MASONDO |

Internal validations

| | Name | Function | Date | Signature |
|-----------------|---------------------|---------------------|------------|---|
| Creator | Nhlakanipho MASONDO | EPU Manager | 23/08/2024 | X  Nhlakanipho MASONDO EPU Manager |
| Verifier | Sifiso LUKHELE | Serial Test Manager | 23/08/2024 | X  Sifiso LUKHELE Serial Test Manager |
| Approver | Kgomotso NKOANA | Test Expert | 23/08/2024 | X  Kgomotso NKOANA Test Expert |

Execution Plan

| | |
|-------------------|------------|
| Start Date | 17/08/2024 |
| End Date | 17/08/2024 |

Contents

Section 1 - Purpose / Objectives

Section 2 - Energy Distribution

2.1 Instructions list

Section 3 - TCMS Network

3.1 Instructions list

Section 4 - Cabin Control

4.1 Instructions list

Section 5 - Internal Lighting

5.1 Instructions list

Section 6 - PACIS System

6.1 Instructions list

Section 7 - Train Ground Communication

7.1 Instructions list

Section 8 - Rescue Mode and Emergency Disconnection

8.1 Instructions list

Section 9 - Emergency Brake

9.1 Instructions list

Section 10 - Service Brake

10.1 Instructions list

Section 11 - Holding and Parking Brake

11.1 Instructions list

Section 12 - Air Condition

12.1 Instructions list

Section 13 - Fire Protection

13.1 Instructions list

Section 14 - Traction and Electric Brake

14.1 Instructions list

Section 15 - Passenger Doors

15.1 Instructions list

Section 16 - Vehicle Normalization

16.1 Instructions list

Section 17 - Report summaries

17.1 Results status

17.2 Tools used

Section 1 – Purpose / Objectives

1. Energy Distribution

Ensure the distribution of 110Vdc and 400Vac through the vehicle from the battery and Auxiliary converter

2. TCMS Network

Verify the working of the TCMS network and its core elements, i.e. TRS, CRS.

3. Cabin Control

Verify the cabin control functions in both normal and backup modes, their commanding of the train lines, and the TCMS response to each function.

4. Internal Lighting

Verify the working of all internal lighting functions.

5. PACIS System

Verify power supply to all PACIS network equipment.

6. Train-Ground Communication

Setup the Train-to-ground systems and verify correct installation of the antennas by VSWR test.

7. Rescue Mode and Emergency Disconnection

The objective of this procedure is to verify the correct operation of the emergency disconnection function, as well as the correct activation of the Back-Up mode.

10. Emergency Brake

The objective of this procedure is to verify all electrical components of the Emergency braking system.

11. Service Brake

The objective of this procedure is to verify all electrical components of the Service brake system.

12. Holding and Parking Brake

The objective of this procedure is to verify all electrical components of the Parking/holding brake system.

13. Passenger Doors

The objective of this procedure is to ensure the proper operation of the train doors.

14. Air Conditioning

Verify the voltage distribution to and correct operation of the HVAC system

15. Fire protection

The objective of this procedure is to verify the configuration of the fire detection units, as well as the presence of the safety resistor in the auxiliary converter.

16. Traction and Electric Brake

The objective of this procedure is to verify all the train lines associated with the traction and electric brake systems of the train

18. Vehicle Normalization

The objective of this procedure is to ensure that all connectors, panels and covers are normalized.



Serial Tests Report
TS241 – M3 – VFT
RTR Vehicle Functional Static Testing Report

Document Reference
GIB0000007049
Version: A0

Emission date
23/08/2024



Serial Tests Report
TS241 – M3 – VFT
RTR Vehicle Functional Static Testing Report

Document Reference
GIB0000007049
Version: A0

Emission date
23/08/2024



Serial Tests Report
TS241 – M3 – VFT
RTR Vehicle Functional Static Testing Report

Document Reference
GIB0000007049
Version: A0

Emission date
23/08/2024

Section 2 – Energy Distribution

2.1 Instructions list

2.1.1 015_NRG-Energy Distribution

I - Information A - Action R - Result NE - Not Executed

| N° | Type | Instruction | File | Result status | Result value | Operator | Vehicle |
|-------|------|---|------|---------------|--------------|---------------------------------------|---------|
| 10001 | I | Energy Distribution (SPP=015) | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10002 | I | Initial Conditions | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10003 | I | All the Circuit Breakers should be OPEN | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10004 | I | Test bench should be connected but with no power supply | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10005 | I | NO 400Vac should be connected to the car | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10006 | A | Close Circuit Breaker 15Q3 (Normal Line) | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10007 | I | Voltage Isolation 110Vdc | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10008 | I | 230Vac and 400Vac Circuit breaker | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10009 | A | Close Circuit Breaker 13Q1 | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10010 | A | Close the circuit breaker 13Q3 | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10011 | I | Normal and Permanent Power Supply | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10012 | I | 110Vdc Permanent Train Line Apply 110Vdc on -93XT304_1 pin 4 to simulate Permanent Train Line | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10013 | A | Apply 110Vdc on the Normal Line using the external power supply | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10014 | A | Measure 110Vdc between 90XR50.X1/1 (+) and 90XR50.X2/1 (-) (intercar connector). [Normal line] | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10015 | I | Permanent Line Circuit Breaker | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10016 | A | Close Circuit Breaker 15Q4 for battery voltage above 80Vdc and close it (permanent Line) | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10017 | I | 230Vac Circuit Breaker | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10018 | A | Close Circuit Breaker 13Q2 | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |

| | | | | | | | |
|-------|---|--|--|----|--|---------------------------------------|----|
| 10019 | A | Close Circuit Breaker 13Q3 | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10020 | I | 230Vac and 400Vac Voltage Supply | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10021 | A | Apply 400Vac to the Vehicle, either on End1 or End2 | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10022 | A | Perform a phase rotation measurement on Connector 90XR62 between phases U(X3), V(X2), W(X1) and ensure the rotation is in the correct direction. | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10023 | R | Phase rotation between U, V, W is correct | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10024 | A | Perform a phase rotation measurement on Connector 90XR52 between phases U(X1), V(X2), W(X3) and ensure the rotation is in the correct direction | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10025 | R | Phase rotation between U, V, W is correct | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10026 | A | Check 230Vac between points L and N of socket -13XT1 | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10027 | R | 230Vac present | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10028 | A | Check 230Vac between points L and N of socket -13XT2 | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10029 | R | 230Vac present | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10030 | A | Remove connector 57XP1_10 | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10031 | A | Remove connector 93XP150 | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10032 | A | Close circuit breaker 34Q1 and 57Q1 | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10033 | A | Check 400Vac +-5% tolerance between Phases (W, V, U) on connector 57XP1_10 (10.b1,10a2,10a1) | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10034 | R | 400Vac +- 5% tolerance is measured between all three phases of 57XP1_10 | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10035 | A | Check 400Vac +-5% tolerance between Phases (W, V, U) on connector 93XP150 (E2, E3, E1) | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10036 | R | 400Vac +- 5% tolerance is measured between all three phases on connector 93XP150 | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10037 | A | Put back connector 57XP1_10 | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |

| | | | | | | | |
|-------|---|---|--|----|--|---------------------------------------|----|
| 10038 | A | Put back connector 93XP150 | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10039 | A | Switch off the 400Vac power supply from the socket | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10040 | I | Auxiliary Converters Command | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10041 | A | Battery Connection Train Lines Measure continuity between END 1 90XR14 pin 30 END 2 90XP24 pin 30 | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10042 | R | Both points are continuous | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10043 | A | Battery Disconnection Train Lines Measure continuity between END 1 90XR14 pin 31 END 2 90XP24 pin 31 | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10044 | R | Both points are continuous | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10045 | A | IES StatusTrain Lines Measure continuity between END 1 90XR15 pin 61 END 2 90XP25 pin 61 and END 1 90XR15 pin 62 END 2 90XP25 pin 62 | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10046 | R | Both points are continuous | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |



Serial Tests Report
TS241 – M3 – VFT
RTR Vehicle Functional Static Testing Report

Document Reference
GIB0000007049
Version: A0

Emission date
23/08/2024

Section 3 – TCMS Network

3.1 Instructions list

3.1.1 025_NET-TCMS Network

I - Information A - Action R - Result NE - Not Executed

| N° | Type | Instruction | File | Result status | Result value | Operator | Vehicle |
|-------|------|---|------|---------------|--------------|---------------------------------------|---------|
| 10001 | I | TCMS Network (SPP=25) | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10002 | I | Initial conditions | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10003 | I | Vehicle test bench should be configured as TC1: 1. TC1 Dataplugs 2. MCE switch set to TC1 | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10004 | A | 110Vdc supply to the Normal Train line is ON | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10005 | I | Power Supply to the Router Switches | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10006 | I | Power supply to the 25A10 SWITCH ETHERNET (CRS1) | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10007 | A | Close Circuit Breaker 25Q10 | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10008 | R | CRS1 25A10 is ON | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10009 | I | Power supply to the 25A11 SWITCH ETHERNET (CRS2) | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10010 | A | Close Circuit Breaker 25Q11 | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10011 | R | CRS2 25A11 is ON | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10012 | I | Power supply to the 25A14 ETHERNET REPEATER (TBR) | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10013 | A | Close Circuit Breaker 25Q14 | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10014 | R | TBR 25A14 is ON | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10015 | A | Close Circuit Breaker 25Q6 | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |

UNCONTROLLED WHEN PRINTED – Not to be used before verification of applicable version number.

© All rights reserved. Reproduction, use or disclosure to third parties, without express written authorization, is strictly prohibited.

| | | | | | | | |
|-------|---|---|--|----|--|---------------------------------------|----|
| 10016 | A | Close Circuit Breaker 25Q7 | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10017 | I | Ethernet Loop | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10018 | A | For each CRS, check that the Ethernet Loop LEDs are flashing | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10019 | R | CRS1 has LEDs on ports X3 and X4 flashing | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10020 | R | CRS2 has ONLY LED on port X4 flashing | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10021 | R | Check on the Test Bench DDU that all Router Switches are available on the network | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10022 | I | Power Supply to the BRIOMS | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10023 | I | Power supply to the 25A6 BRIOM 40/10 ETH 6 | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10024 | R | BRIOM 25A6 is ON | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10025 | A | Check visually that ground braid is connected to BRIOM. | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10026 | I | Power supply to the 25A7 BRIOM 40/10 ETH 7 | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10027 | R | BRIOM 25A7 is ON | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10028 | A | Check visually that ground braid is connected to BRIOM | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |

Section 4 – Cabin Control

4.1 Instructions list

4.1.1 020_CAB-Cabin Control

I - Information A - Action R - Result NE - Not Executed

| N° | Type | Instruction | File | Result status | Result value | Operator | Vehicle |
|-------|------|---|------|---------------|--------------|---------------------------------------|---------|
| 10001 | I | Cabin Control (SPP=020) | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10002 | I | Train Lines | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10003 | A | Cab Selected on Train - Train Lines Measure continuity between END1 90XR14 pin 3 END2 90XP24 pin 3 | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10004 | R | Both pins are continuous | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10005 | A | Cab Active TC1 Train Lines Measure continuity between END1 90XR14 pin 4 END2 90XP24 pin 4 | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10006 | R | Both pins are continuous. | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10007 | A | Cab Active TC2 Train Lines Measure continuity between END1 90XR14 pin 5 END2 90XP24 pin 5 | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10008 | R | Both pins are continuous | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10009 | A | Master Key TC1 Train Lines Measure continuity between END1 90XR14 pin 17 END2 90XP24 pin 17 | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10010 | R | Both pins are continuous | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |



Serial Tests Report
TS241 – M3 – VFT
RTR Vehicle Functional Static Testing Report

Document Reference
GIB0000007049
Version: A0

Emission date
23/08/2024

Section 5 – Internal Lighting

5.1 Instructions list

5.1.1 052_LGT-Internal Lighting

I - Information A - Action R - Result NE - Not Executed

| N° | Type | Instruction | File | Result status | Result value | Operator | Vehicle |
|-------|------|---|------|---------------|--------------|-------------------------------|---------|
| 10001 | I | Internal Lighting (SPP=52) | | OK | | Paseka Ditlhakanyane - 491468 | M3 |
| 10002 | I | Initial Conditions | | OK | | Paseka Ditlhakanyane - 491468 | M3 |
| 10003 | I | 110Vdc Normal line is ON | | OK | | Paseka Ditlhakanyane - 491468 | M3 |
| 10004 | I | Cleaning Light Command | | OK | | Paseka Ditlhakanyane - 491468 | M3 |
| 10005 | A | 110Vdc Permanent Train Line Apply 110V on 93XT304_1 pin 4 to simulate permanent supply | | OK | | Paseka Ditlhakanyane - 491468 | M3 |
| 10006 | A | Close Circuit Breaker 52Q3 | | OK | | Paseka Ditlhakanyane - 491468 | M3 |
| 10007 | A | Close Circuit Breaker 52Q4 | | OK | | Paseka Ditlhakanyane - 491468 | M3 |
| 10008 | A | Close Circuit Breaker 52Q5 | | OK | | Paseka Ditlhakanyane - 491468 | M3 |
| 10009 | R | All saloon emergency lights (low intensity) are OFF on all light modules (Left + Right) | | OK | | Paseka Ditlhakanyane - 491468 | M3 |
| 10010 | A | Turn Cleaning Light Switch 52S6 to ON position. | | OK | | Paseka Ditlhakanyane - 491468 | M3 |
| 10011 | R | All saloon emergency lights (low intensity) are (ON) on all light modules (Left + Right) | | OK | | Paseka Ditlhakanyane - 491468 | M3 |
| 10012 | A | Reset Circuit Breaker 52Q5 (Open and Close) | | OK | | Paseka Ditlhakanyane - 491468 | M3 |
| 10013 | A | Close Circuit Breaker 52Q1 | | OK | | Paseka Ditlhakanyane - 491468 | M3 |
| 10014 | A | Close Circuit Breaker 52Q2 | | OK | | Paseka Ditlhakanyane - 491468 | M3 |



| | | | | | | | |
|-------|---|--|--|----|--|-------------------------------|----|
| 10015 | R | All saloon emergency lights (low intensity) are ON (on) all light modules (Left + Right) | | OK | | Paseka Ditlhakanyane - 491468 | M3 |
|-------|---|--|--|----|--|-------------------------------|----|

Section 6 – PACIS System

6.1 Instructions list

6.1.1 054_PIS-PACIS System

I - Information A - Action R - Result NE - Not Executed

| N° | Type | Instruction | File | Result status | Result value | Operator | Vehicle |
|-------|------|--|------|---------------|--------------|---------------------------------------|---------|
| 10001 | I | PACIS System IO (SPP=054) | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10002 | I | Initial conditions | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10003 | I | 110Vdc Normal line is connected and ON | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10004 | I | Circuit Breakers | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10005 | A | Close Circuit Breaker 54Q1 | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10006 | A | Close Circuit Breaker 54Q2 | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10007 | A | Close Circuit Breaker 54Q10 | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10008 | A | Close Circuit Breaker 54Q11 | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10009 | A | Close Circuit Breaker 55Q2 | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10010 | A | Close Circuit Breaker 55Q3 | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10011 | R | All 'Pacis System' circuit breakers are closed | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10012 | I | Power Supply of Router Switches | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10013 | I | Ethernet Switch CRS1 | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10014 | R | CRS1 is ON | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10015 | I | Ethernet Switch CRS2 | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10016 | R | CRS2 is ON | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10017 | I | DPAI-1 | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10018 | R | DPAI-1 is ON | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10019 | I | DPAI-2 | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10020 | R | DPAI-2 is ON | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10021 | I | Lateral Display 'LAT1' | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |

| | | | | | | | |
|-------|---|---|--|----|----|---------------------------------------|----|
| 10022 | R | The PWR (power) LED is ON on the Lateral Display 'LAT1' | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10023 | I | Lateral Display 'LAT2' | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10024 | R | The PWR (power) LED is ON on the Lateral Display 'LAT2' | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10025 | I | Interior Display 'INT1' | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10026 | R | The PWR (power) LED is ON on the Interior Display 'INT1' | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10027 | I | Interior Display 'INT2' | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10028 | R | The PWR (power) LED is ON on the Interior Display 'INT2' is ON | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10029 | I | Impedance of Loudspeaker | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10030 | I | Saloon Speakers Commanded by DPAI-1 | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10031 | A | Measure the impedance connector '54XP1_X4' between pins: z32(+) and z30 (-) | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10032 | R | Impedance Result Max: $x \leq 32.00$ (Ohm) | | OK | 30 | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10033 | I | Saloon Speakers Commanded by DPAI-2 | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10034 | A | Measure the impedance connector '54XP2_X4' between pins: z32(+) and z30 (-) | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10035 | R | Impedance Result Max: $x \leq 32.00$ (Ohm) | | OK | 31 | Hlawulani Nick Mabundzane - 418320 | M3 |

Section 7 – Train Ground Communication

7.1 Instructions list

7.1.1 062_ETS-ERTMS

I - Information A - Action R - Result NE - Not Executed

| N° | Type | Instruction | File | Result status | Result value | Operator | Vehicle |
|-------|------|--|---|---------------|--------------|---------------------------------------|---------|
| 10001 | I | ERTMS (SPP=062) | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10002 | A | ERTMS Bypass Train Lines Check continuity between END1 90XR14 pin 11 END2 90XP24 pin 11 | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10003 | R | Both pins are continuous | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10004 | A | Emergency Brake ERTMS 1 Train Lines Check continuity between END1 90XR14 pin 18 END2 90XP24 pin 18 | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10005 | R | Both pins are continuous | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10006 | I | Emergency Brake ERTMS 2 Train Lines Check continuity between END1 90XR14 pin 20 END2 90XP24 pin 20 | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10007 | R | Both pins are continuous | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10008 | I | Eurobalise Antenna Cable | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10009 | A | Check continuity between [Intercar (LOCAL: +END1; Connector -90XR10) and Intercar (LOCAL: +END2; connector - 90XP20)] according to the image below |  | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10010 | R | Eurobalise Antenna cable is correctly configured | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |

UNCONTROLLED WHEN PRINTED – Not to be used before verification of applicable version number.

© All rights reserved. Reproduction, use or disclosure to third parties, without express written authorization, is strictly prohibited.



Serial Tests Report
TS241 – M3 – VFT
RTR Vehicle Functional Static Testing Report

Document Reference
GIB0000007049
Version: A0

Emission date
23/08/2024

Section 8 – Rescue Mode and Emergency Disconnection

8.1 Instructions list

8.1.1 027_ERM-Rescue Mode and Emergency Disconnection

I - Information A - Action R - Result NE - Not Executed

| N° | Type | Instruction | File | Result status | Result value | Operator | Vehicle |
|-------|------|--|------|---------------|--------------|------------------------------------|---------|
| 10001 | I | Rescue Mode and Emergency Disconnection (SPP=027) | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10002 | I | Backup Mode | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10003 | A | Backup Mode Train Lines Check continuity between END1 90XR15 pin 23 END2 90XP25 pin 23 and 27K1 A1 | | OK | | Paseka Ditlhakanyane - 491468 | M3 |
| 10004 | R | All points are continuous | | OK | | Paseka Ditlhakanyane - 491468 | M3 |
| 10005 | A | Check continuity between 27K1 A2 and Ground | | OK | | Paseka Ditlhakanyane - 491468 | M3 |
| 10006 | R | The points are continuous | | OK | | Paseka Ditlhakanyane - 491468 | M3 |
| 10007 | I | Emergency Disconnection | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10008 | A | Emergency Disconnection Train Lines Check continuity between END1 90XR15 pin 24 END2 90XP25 pin 24 | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10009 | R | All points are continuous | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |

Section 9 – Emergency Brake

9.1 Instructions list

9.1.1 044_UBK-Emergency Brake

I - Information A - Action R - Result NE - Not Executed

| N° | Type | Instruction | File | Result status | Result value | Operator | Vehicle |
|-------|------|---|---|---------------|--------------|---------------------------------------|---------|
| 10001 | I | Emergency Brake (SPP=044) | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10002 | I | Initial Conditions | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10003 | I | No PEAs are activated | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10004 | I | 110Vdc Normal power supply should be connected to the vehicle and ON | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10005 | I | Visual Inspection | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10006 | A | Physically and visually inspect all the Disk Break Units (DBU) and brake pads, to ensure they are securely fitted |  | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10007 | R | All the brake DBUs are correctly installed, and all the brake pads are correctly installed and locked | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10008 | A | Check the pipe installation | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10009 | R | All the pipes are installed on the vehicle | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10010 | A | Check all the Passenger Emergency Alarm handles, and ensure they are connected to their respective connectors | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10011 | R | All the PEAs are installed and connected | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10012 | I | Train Lines | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10013 | A | Emergency Brake Loop Train Lines Check continuity between END1 90XR24 pin 8 END2 90XP34 pin 8 | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |

UNCONTROLLED WHEN PRINTED – Not to be used before verification of applicable version number.

© All rights reserved. Reproduction, use or disclosure to third parties, without express written authorization, is strictly prohibited.

| | | | | | | | |
|-------|---|--|--|----|--|---------------------------------------|----|
| 10014 | R | Both points are continuous | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10015 | A | Emergency Brake Loop Override Train Lines Check continuity between END1 90XR24 pin 9 END2 90XP34 pin 9 | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10016 | R | Both points are continuous | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10017 | I | Emergency Brake Train Line Check continuity between END1 90XR25 pin 67 END2 90XP35 pin 67 | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10018 | R | Both points are continuous | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10019 | A | PEA Loop OTDR Train Lines Check continuity between END1 90XR24 pin 10 END2 90XP34 pin 10 | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10020 | R | Both points are continuous | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10021 | A | PEA Loop Train Lines Check continuity between END1 90XR25 pin 95 END2 90XP35 pin95 | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10022 | R | Both points are continuous | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10023 | A | PEA Reset Check continuity on Timer Relay 44D1 between points A1 and B1. Check continuity on Timer Relay 44D1 between points A4, B3 and C4 | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10024 | R | The Points are continuous. | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |

Section 10 – Service Brake

10.1 Instructions list

10.1.1 040_SBK-Service Brake

I - Information A - Action R - Result NE - Not Executed

| N° | Type | Instruction | File | Result status | Result value | Operator | Vehicle |
|-------|------|--|---|---------------|--------------|---------------------------------------|---------|
| 10001 | I | Service Brake (SPP=040) | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10002 | I | Initial Conditions | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10003 | I | No air supply to the vehicle | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10004 | I | All brake panel cocks are in normal position (not isolated) | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10005 | I | 110Vdc Normal power supply should be connected to the vehicle and ON | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10006 | I | Follow the procedure in the document below to upload software onto the TBCU electronic |  | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10007 | I | Power Supply | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10008 | A | Remove the connector 10XR12_XCB2 from the propulsion box | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10009 | A | Close Circuit Breaker 33Q1, 33Q3 and 33Q5 | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10010 | A | Check the voltage on connector 10XR12_XCB2 between pins 4 (+) and 69 (-); 4(+) and 67(-); and 5(+) and 68(-) | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10011 | R | Battery Voltage (above 80Vdc) is measured on connector 10XR12_XCB2 between pins 4 (+) and 69 (-); 4(+) and 67(-); and 5(+) and 68(-) | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10012 | A | Open Circuit Breaker 33Q1 and 33Q3, Replace connector 10XR12_XCB2 on the propulsion box, and Close Circuit breaker 33Q1 and 33Q3 | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |

| | | | | | | |
|-------|---|---|----|--|---------------------------------------|----|
| 10013 | A | Remove the connector -40XP2_C2_16 from pneumatic brake panel | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10014 | A | Close Circuit Breaker 40Q1 | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10015 | A | Check the voltage on connector 40XP2_C2_16 between pins 13 (+) and 31 (-) | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10016 | R | Battery Voltage (above 80Vdc) is measured on connector 40XP2_C2_16 between pins 13 (+) and 31 (-) | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10017 | A | Open Circuit Breaker 40Q1, Replace connector -40XP2_C2_16 on the pneumatic brake panel, and Close Circuit breaker -40Q1 | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10018 | R | The pneumatic brake panel 40A2 is ON | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10019 | I | Train Lines | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10020 | A | EB Reduced Train Lines Check continuity between END1 90XR15 pin 60 END2 90XP25 pin 60 | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10021 | R | Both points are continuous | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10022 | A | Brake Applied Train Lines Check continuity between END1 90XR15 pin 50 END2 90XP25 pin 50 | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10023 | R | Both points are continuous | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10024 | A | Remote Isolation Train Lines Check continuity between END1 90XR15 pin 59 END2 90XP25 pin 59 | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10025 | R | Both points are continuous | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |

Section 11 – Holding and Parking Brake

11.1 Instructions list

11.1.1 045_PBK-Holding and Parking Brake

I - Information A - Action R - Result NE - Not Executed

| N° | Type | Instruction | File | Result status | Result value | Operator | Vehicle |
|-------|------|--|------|---------------|--------------|---------------------------------------|---------|
| 10001 | I | Holding and Parking Brake (SPP_045) | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10002 | I | Initial Conditions | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10003 | A | Using the tools list on the side of your screen, record the serial number of the manometer that will be used during this test | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10004 | A | Check that the pressure on Test point C2.11/1 is >5bar | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10005 | I | Visual Inspection | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10006 | A | Check the installation of the manual parking brake release components (lever + cable) | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10007 | R | The lever is securely fixed (tight), and the cable is correctly attached to the bogie (there is no excess cable, and all clamps are installed) | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10008 | I | Circuit Breaker | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10009 | A | Close Circuit Breaker 33Q3 | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10010 | A | Close Circuit Breaker 33Q5 | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10011 | I | Parking Brake Pressure Switch | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10012 | R | Read Defined Variable [TT] (TBCU3) LI_PARK_BR_RELEASE = 1.0 | | OK | 1 | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10013 | R | Read Defined Variable [TT] (TBCU3) LI_BRAKE_STAT = 0.0 | | OK | 0 | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10014 | R | Read Defined Variable [TT] (MPU1) tbcu3_parkbrakerelease = 1.0 | | OK | 1 | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10015 | R | Read Defined Variable [TT] (MPU1) tbcu3_li_pbrake_stat = 0.0 | | OK | 0 | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10016 | A | Parking Brake Applied Train Lines Check continuity between END1 90XR15 pin 77 | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |

UNCONTROLLED WHEN PRINTED – Not to be used before verification of applicable version number.

© All rights reserved. Reproduction, use or disclosure to third parties, without express written authorization, is strictly prohibited.

| | | | | | | | |
|-------|---|---|--|----|---|---------------------------------------|----|
| | | END2 90XP25 pin 77 | | | | | |
| 10017 | R | Both points are continuous | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10018 | A | Remote Parking Command Train Lines Check continuity between END1 90XR15 pin 68 END2 90XP25 pin 68 | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10019 | R | Both points are continuous | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10020 | I | Parking Brake Applied | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10021 | I | For this section of the test, ensure that the pressure on test point C2.11/1 is ALWAYS BELOW 4.8 Bar. if it goes above, turn the Isolation cock C2.3.2 to CLOSE position to drain the air | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10022 | A | Position the Isolation cock C2.3.2 in CLOSE position. Allow the parking brake air pressure to drain to below 4.5 Bar. Use the test point C2.11/1 to verify the air pressure <4.5 Bar | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10023 | R | Pressure at test point C2.11/1 <4.5 Bar | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10024 | R | Read Defined Variable [TT] (TBCU3) LI_PARK_BR_RELEASE = 0.0 | | OK | 0 | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10025 | R | Read Defined Variable [TT] (MPU1) tbcu3_parkbrakerelease = 0.0 | | OK | 0 | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10026 | A | Return the Isolation cock C2.3.2 to OPEN position | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10027 | R | Read Defined Variable [TT] (TBCU3) LI_BRAKE_STAT = 1.0 | | OK | 1 | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10028 | R | Read Defined Variable [TT] (MPU1) tbcu3_li_pbrake_stat = 1.0 | | OK | 1 | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10029 | R | Read Defined Variable [TT] (TBCU3) LI_PARK_BR_DC = 0.0 | | OK | 0 | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10030 | R | Read Defined Variable [TT] (MPU1) tbcu3_parkbrakeisoldc = 0.0 | | OK | 0 | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10031 | R | Read Defined Variable [TT] (MPU1) li_pbk_m3parkbrakeisol = 0.0 | | OK | 0 | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10032 | A | Position the Isolation cock C2.3.2 in CLOSE position | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |

| | | | | | | | |
|-------|---|---|--|----|---|---------------------------------------|----|
| 10033 | R | Read Defined Variable [TT] (MPU1) li_pbk_m3parkbrakeisol = 1.0 | | OK | 1 | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10034 | R | Read Defined Variable [TT] (TBCU3) LI_BRAKE_STAT = 0.0 | | OK | 0 | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10035 | R | Read Defined Variable [TT] (MPU1) tbcu3_li_pbrake_stat = 0.0 | | OK | 0 | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10036 | R | Read Defined Variable [TT] (TBCU3) LI_PARK_BR_DC = 1.0 | | OK | 1 | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10037 | R | Read Defined Variable [TT] (MPU1) tbcu3_parkbrakeisoldc = 1.0 | | OK | 1 | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10038 | A | Return the Isolation cock C2.3.2 to OPEN position | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |

Section 12 – Air Condition

12.1 Instructions list

12.1.2 057_HVA_SME-HVAC_SME

I - Information A - Action R - Result NE - Not Executed

| N° | Type | Instruction | File | Result status | Result value | Operator | Vehicle |
|-------|------|--|------|---------------|--------------|----------|---------|
| 10001 | I | HVA_057 Air Conditioning | | NE | | | M3 |
| 10002 | I | Initial conditions | | NE | | | M3 |
| 10003 | A | Car Should be Prepared with CVS running and 400V ac available in the car | | NE | | | M3 |
| 10004 | I | HVAC AC Power Supply | | NE | | | M3 |
| 10005 | A | Close Circuit Breaker 13Q1 and 13Q5 | | NE | | | M3 |
| 10006 | A | Check on the DDU if the HVAC is offline | | NE | | | M3 |
| 10007 | I | Checking 400Vac | | NE | | | M3 |
| 10008 | A | Close Circuit Breaker 57Q1 | | NE | | | M3 |
| 10009 | A | Disconnect connector 57XP4_X5 and Measure 400Vac between all 3 phases which are a1- phase L1, a2- Phase L2 and b1- phase L3 of connector 57XP4_X5 | | NE | | | M3 |
| 10010 | R | 400Vac measured between all phases | | NE | | | M3 |
| 10011 | A | On same connector 57XP4_X5, with a phasemeter, check the correct Phase Rotation between points a1- Phase L1, a2- Phase L2 and b1- Phase L3. | | NE | | | M3 |
| 10012 | R | The phase rotation is correct between all three phases | | NE | | | M3 |
| 10013 | I | Saloon HVAC | | NE | | | M3 |
| 10014 | A | Close Circuit Breaker 57Q2 | | NE | | | M3 |
| 10015 | A | Allow the HVAC to initialize and check on the DDU if the HVAC is online | | NE | | | M3 |
| 10016 | R | HVAC unit is online and starts to work | | NE | | | M3 |
| 10017 | I | HVAC web portal | | NE | | | M3 |
| 10018 | A | The attached document is a procedure on how to navigate around the maintenance  | | NE | | | M3 |

| | | | | | | |
|-------|---|--|---|----|--|----|
| | | software. | | | | |
| 10019 | I | Connect the laptop to the HVAC maintenance software using web browser. Enter the following IP address on the web browser 10.136.xxx.31 xxx represents the train number Login: maint Password: maint | | NE | | M3 |
| 10020 | R | On status tab, Active mode is off for both cab and saloon |  | NE | | M3 |
| 10021 | A | Go to Alarms tab and clear all the alarms for saloon and cabin | | NE | | M3 |
| 10022 | I | HVAC inhib | | NE | | M3 |
| 10023 | A | Force [TT] (MPU1) lo_hva_m3hvacinhibr1__1 = 1 | | NE | | M3 |
| 10024 | A | Force [TT] (MPU1) lo_hva_m3hvacinhibr2__1 = 1 | | NE | | M3 |
| 10025 | I | HVAC 50% restriction | | NE | | M3 |
| 10026 | A | Force [TT] NRG_HvacM350Cmd = 0 | | NE | | M3 |
| 10027 | I | Full "Self-test" saloon | | NE | | M3 |
| 10028 | I | For the following tests make sure on the webHMI tab you change controller to be controlled by webHMI and not MPU |  | NE | | M3 |
| 10029 | A | Before running the full test, please click on reset test to reset the previous results. | | NE | | M3 |
| 10030 | A | Select Full-Test on the Saloon HVAC |  | NE | | M3 |
| 10031 | R | All saloon HVAC units work according to the mode described in the "ACTIVE MODE" on the status tab | | NE | | M3 |
| 10032 | R | When the test is complete, please check if the status is showing as "TEST PASS" and the test took 3 mins +/- 2 seconds for each mode. | | NE | | M3 |
| 10033 | I | Forced Mode (Saloon HVAC) | | NE | | M3 |
| 10034 | I | During all tests Walk through the whole car and physically check (feel) that the HVAC is functioning as desired | | NE | | M3 |

| | | | | | | |
|-------|---|---|--|----|--|----|
| 10035 | I | Go to maintenance tab to force the following modes |  | NE | | M3 |
| 10036 | I | Cooling Mode | | NE | | M3 |
| 10037 | A | Select forced Cooling mode on the Saloon HVAC and let it run for 5 mins | | NE | | M3 |
| 10038 | R | All HVAC units are cooling | | NE | | M3 |
| 10039 | I | Heating Mode | | NE | | M3 |
| 10040 | A | Select forced Heating mode on the Saloon HVAC and let it run for 5 mins | | NE | | M3 |
| 10041 | R | All HVAC units are heating | | NE | | M3 |
| 10042 | I | HVAC Faults | | NE | | M3 |
| 10043 | A | In the maintenance software, select the "Alarms" tab | | NE | | M3 |
| 10044 | A | Ensure there are no active faults on the HVAC for the Saloon. Use the highlighted drop down to navigate between saloon and cabin. |  | NE | | M3 |
| 10045 | R | No active faults identified on the HVAC unit | | NE | | M3 |
| 10046 | A | Release [TT] (MPU1) lo_hva_m3hvacinhibr1__1 | | NE | | M3 |
| 10047 | A | Release [TT] (MPU1) lo_hva_m3hvacinhibr2__1 | | NE | | M3 |
| 10048 | A | Release [TT] NRG_HvacM350Cmd | | NE | | M3 |
| 10049 | I | End of test | | NE | | M3 |

12.1.1 057_HVA-HVAC_TK

I - Information A - Action R - Result NE - Not Executed

| N° | Type | Instruction | File | Result status | Result value | Operator | Vehicle |
|-------|------|--|------|---------------|--------------|---------------------------------------|---------|
| 10001 | I | Air Conditioning (SPP=057) | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10002 | I | Power Supply | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10003 | A | Close Circuit Breaker 57Q2 | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10004 | A | Remove Connector 57XP1_5 from HVAC Panel | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10005 | A | Force [TT] (MPU1) lo_hva_m3hvacinhibr1__1 = 0 | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10006 | A | Force [TT] (MPU1) lo_hva_m3hvacinhibr2__1 = 0 | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10007 | R | Check battery voltage (above 80Vdc) between points 11 and 9 of the connector 57XP1_5 | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10008 | A | Force [TT] (MPU1) lo_hva_m3hvacinhibr2__1 = 1 | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10009 | R | Check 0Vdc between points 11 and 9 of the connector 57XP1_5 | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10010 | A | Force [TT] (MPU1) lo_hva_m3hvacinhibr1__1 = 1 | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10011 | R | Check 0Vdc between points 11 and 9 of the connector 57XP1_5 | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10012 | R | Check 0Vdc between points 10 and 9 of the connector 57XP1_5 | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10013 | A | Force [TT] (MPU1) lo_hva_m3hvacinhibr2__1 = 0 | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10014 | A | Force [TT] (MPU1) lo_hva_m3emergventil__1 = 1 | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10015 | R | Check 0Vdc between points 11 and 9 of the connector 57XP1_5 | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10016 | R | Check battery voltage (above 80Vdc) between points 10 and 9 of the connector 57XP1_5 | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |

| | | | | | | | |
|-------|---|--|---|----|--|---------------------------------------|----|
| 10017 | A | Release [TT] (MPU1) lo_hva_m3emergventil__1 | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10018 | A | Release [TT] (MPU1) lo_hva_m3hvacinhibr1__1 | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10019 | A | Release [TT] (MPU1) lo_hva_m3hvacinhibr2__1 | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10020 | A | Put back the connector 57XP1_5 on the HVAC panel | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10021 | I | HVAC Electronic Power Supply | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10022 | A | Close Circuit Breaker F1 on the HVAC Panel | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10023 | A | Turn the control switch to AUTO position on the HVAC Panel | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10024 | R | The HVAC electronic is ON | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10025 | A | Open Circuit Breaker F1 on the HVAC Panel | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10026 | R | The HVAC electronic is OFF | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10027 | A | Close Circuit Breaker F1 on the HVAC Panel | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10028 | I | Software Upload | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10029 | I | Follow the procedure in the document below to upload software onto the HVAC electronic | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10030 | A | |  | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10031 | A | |  | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10032 | I | Sensor's Grade | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10033 | I | Each temperature sensor has calibrated grade information. The sensor must be setup with this information. | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10034 | A | The label with sensor grade information is found inside the HVAC frame, near the filter. Inside the train, open the ceiling filter access, rotate a damper and read the label. | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |

| | | | | | | | |
|-------|---|---|---|----|----|---------------------------------------|----|
| 10035 | R | Sensor grade for HVAC Return Air (RAS) is: | | OK | 3 | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10036 | R | Sensor grade for HVAC Duct Air (DAS) is: | | OK | 2H | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10037 | R | Sensor grade for HVAC Fresh Air (FAS) is: | | OK | 4 | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10038 | R | Sensor grade for HVAC Duct Air 2 (DAS2) is: | | OK | 4 | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10039 | A | In the maintenance software, select the "Application settings" page and click the "Sensors" tab | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10040 | A | Enter the data found on the label for each grade. Then, click "Save settings". |  | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10041 | A | Open Circuit Breaker F1 on the HVAC Panel | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10042 | I | Checking 400Vac | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10043 | A | Ensure that the 400Vac Shore Supply is connected to the vehicle, else connect it | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10044 | A | Close Circuit Breaker 57Q1 | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10045 | A | Measure 400Vac (+-5%) in the Terminal Block next to the connector '57XP1_10. A / '57XP1_10. B' on the HVAC Panel | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10046 | R | 400Vac (+-5%) is measured between each of the phases | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10047 | A | On the HVAC Panel, with a phasemeter, check the correct Phase Rotation between points L1- Phase R, L2- Phase S and L3- Phase T. | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10048 | R | The phase rotation is correct between all three phases | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10049 | I | Saloon HVAC | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10050 | A | Close Circuit Breaker F1 on the HVAC Panel | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10051 | A | Force [TT] (MPU1) lo_hva_m3hvacinhibr2__1 = 1 | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10052 | A | Force [TT] (MPU1) lo_hva_m3hvacinhibr1__1 = 1 | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |

| | | | | | | | |
|-------|---|---|---|----|--|---------------------------------------|----|
| 10053 | A | Force [TT] NRG_HvacM350Cmd = 0 | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10054 | R | HVAC unit turns ON and starts to work | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10055 | I | Reconnect the laptop to the HVAC maintenance software using HCU Finder | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10056 | R | The Exhaust fans are Turned Off (Confirm on Forced tab that Actual exhauster speed is OFF) |  | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10057 | I | Forced Mode (Saloon HVAC) | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10058 | I | To force any mode on HVAC, please follow the manual below to open the communication channel with the HVAC. Connection should be through the HVAC Electronic Device in the HC cubicle. |  | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10059 | I | In the maintenance software, select the 'Forced' tab, and use the "Required working mode" drop down box to force the following modes: | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10060 | I | Ventilation Mode |  | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10061 | A | Force Ventilation mode on the Saloon HVAC | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10062 | R | All saloon HVAC units work in Ventilation mode. Not heating/cooling | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10063 | R | The Exhaust fans are Turned OFF | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10064 | I | Cooling Mode | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10065 | A | Force Cooling mode on the Saloon HVAC | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10066 | R | All saloon HVAC units work in Cooling mode | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10067 | R | The Exhaust fans are Turned OFF | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10068 | I | Heating Mode | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10069 | A | Force Heating mode on the Saloon HVAC | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10070 | R | All saloon HVAC units work in Heating mode | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10071 | R | The Exhaust fans are Turned OFF | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10072 | I | Automatic Mode | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |

| | | | | | | | |
|-------|---|---|---|----|--|---------------------------------------|----|
| 10073 | A | Force Self-Test on the Saloon HVAC | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10074 | R | All saloon HVAC units work according to the mode described in the "Actual working mode" | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10075 | R | The Exhaust fans are Turned OFF | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10076 | I | HVAC Faults | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10077 | A | Open Circuit Breaker 57Q1 | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10078 | R | All saloon HVAC units STOP working | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10079 | A | Close Circuit Breaker 57Q1 | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10080 | R | All saloon HVAC units START working | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10081 | A | In the maintenance software, select the "Alarms / Warnings" tab |  | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10082 | I | For the next sections, walk through the whole car and physically check (feel) that the HVAC is functioning as desired | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10083 | A | Ensure there are no active faults on the HVAC | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10084 | R | No active faults identified on the HVAC unit | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10085 | A | Release [TT] (MPU1) lo_hva_m3hvacinhibr1__1 | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10086 | A | Release [TT] (MPU1) lo_hva_m3hvacinhibr2__1 | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10087 | A | Release [TT] NRG_HvacM350Cmd | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10088 | I | END TEST | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |



Serial Tests Report
TS241 – M3 – VFT
RTR Vehicle Functional Static Testing Report

Document Reference
GIB0000007049
Version: A0

Emission date
23/08/2024

Section 13 – Fire Protection

13.1 Instructions list

13.1.1 067_FSD-Fire Protection

I - Information A - Action R - Result NE - Not Executed

| N° | Type | Instruction | File | Result status | Result value | Operator | Vehicle |
|-------|------|--|------|---------------|--------------|---------------------------------------|---------|
| 10001 | I | Fire Protection System (SPP=067) | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10002 | I | Fire Detection Train Lines | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10003 | A | Fire Detection Train Lines Check continuity between END1 90XR14 pin 21 END2 90XP24 pin 21 | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10004 | R | Both points are continuous | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10005 | I | Continuity Test | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10006 | I | The following steps are continuity tests between the two points described in each step. Use a multi-meter for this test. | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10007 | A | From: [(local: +END1 -90XR13.B (pin 4))] to: [-Inter-connector (local: +END2 -90XP23.b pin 4)] | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10008 | A | From: [(local: +END1 -90XR13.B (pin 5))] to: [-Inter-connector (local: +END2 -90XP23.b pin 5)] | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10009 | A | From: [(local: +END1 -90XR13.A (pin 7))] to: [-Inter-connector (local: +END2 -90XP23.a pin 7)] | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10010 | A | From: [(local: +END1 -90XR13.A (pin 8))] to: [-Inter-connector (local: +END2 -90XP23.a pin 8)] | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |

UNCONTROLLED WHEN PRINTED – Not to be used before verification of applicable version number.

© All rights reserved. Reproduction, use or disclosure to third parties, without express written authorization, is strictly prohibited.



Serial Tests Report
TS241 – M3 – VFT
RTR Vehicle Functional Static Testing Report

Document Reference
GIB0000007049
Version: A0

Emission date
23/08/2024

Section 14 – Traction and Electric Brake

14.1 Instructions list

14.1.1 033_TRC-Traction and Electric Brake

I - Information A - Action R - Result NE - Not Executed

| N° | Type | Instruction | File | Result status | Result value | Operator | Vehicle |
|-------|------|---|------|---------------|--------------|-------------------------------|---------|
| 10001 | I | Traction and Electric Brake (SPP=033) | | OK | | Paseka Ditlhakanyane - 491468 | M3 |
| 10002 | I | Circuit Breakers and Configuration | | OK | | Paseka Ditlhakanyane - 491468 | M3 |
| 10003 | A | Close Circuit Breaker 33Q2 | | OK | | Paseka Ditlhakanyane - 491468 | M3 |
| 10004 | A | Close Circuit Breaker 33Q4 | | OK | | Paseka Ditlhakanyane - 491468 | M3 |
| 10005 | A | Close Circuit Breaker 33Q5 | | OK | | Paseka Ditlhakanyane - 491468 | M3 |
| 10006 | I | Circuit Breaker 33Q1 and 33Q3 must be Opened | | OK | | Paseka Ditlhakanyane - 491468 | M3 |
| 10007 | I | 110Vdc Normal Traction EL Train Line Apply bridge piece between END2 90XP25 pin 14 and pin 42 | | OK | | Paseka Ditlhakanyane - 491468 | M3 |
| 10008 | A | Close Circuit Breaker 33Q1 | | OK | | Paseka Ditlhakanyane - 491468 | M3 |
| 10009 | A | Close Circuit Breaker 33Q3 | | OK | | Paseka Ditlhakanyane - 491468 | M3 |
| 10010 | R | Read Defined Variable [TT] (TBCU3) LI_CAR_ID3 = 1.00 | | OK | 1 | Paseka Ditlhakanyane - 491468 | M3 |
| 10011 | I | The TBCU should appear on TCMS network on DDU screen | | OK | | Paseka Ditlhakanyane - 491468 | M3 |
| 10012 | I | Train Lines | | OK | | Paseka Ditlhakanyane - 491468 | M3 |
| 10013 | A | Forward Train Lines Check continuity between END1 90XR15 pin 25 END2 90XP25 pin 25 | | OK | | Paseka Ditlhakanyane - 491468 | M3 |

| | | | | | | | |
|-------|---|--|---|----|--|-------------------------------|----|
| 10014 | R | Both points are continuous | | OK | | Paseka Ditlhakanyane - 491468 | M3 |
| 10015 | A | Reverse Train Lines Check continuity between END1 90XR15 pin 30 END2 90XP25 pin 30 | | OK | | Paseka Ditlhakanyane - 491468 | M3 |
| 10016 | R | Both points are continuous | | OK | | Paseka Ditlhakanyane - 491468 | M3 |
| 10017 | A | Traction Train Lines Check continuity between END1 90XR15 pin 31 END2 90XP25 pin 31 | | OK | | Paseka Ditlhakanyane - 491468 | M3 |
| 10018 | R | Both points are continuous | | OK | | Paseka Ditlhakanyane - 491468 | M3 |
| 10019 | A | No Brake Train Lines Check continuity between END1 90XR15 pin 32 END2 90XP25 pin 32 | | OK | | Paseka Ditlhakanyane - 491468 | M3 |
| 10020 | R | Both points are continuous | | OK | | Paseka Ditlhakanyane - 491468 | M3 |
| 10021 | A | Traction Interlock Bypass Train Lines Check continuity between END1 90XR14 pin 6 END2 90XP24 pin 6 | | OK | | Paseka Ditlhakanyane - 491468 | M3 |
| 10022 | R | Both points are continuous | | OK | | Paseka Ditlhakanyane - 491468 | M3 |
| 10023 | A | Traction Interlock Train Lines Check continuity between END1 90XR15 pin 41 END2 90XP25 pin 41 and -10XP12_XCB2 pin 8 | | OK | | Paseka Ditlhakanyane - 491468 | M3 |
| 10024 | R | All pins are continuous | | OK | | Paseka Ditlhakanyane - 491468 | M3 |
| 10025 | I | 110Vdc Normal Traction EL Train Line Remove bridge piece on END2 90XP25 pin 49 and pin 42 | | OK | | Paseka Ditlhakanyane - 491468 | M3 |
| 10026 | I | Coolant Liquid | | OK | | Paseka Ditlhakanyane - 491468 | M3 |
| 10027 | A | Check that the coolant level is atleast 1/2 of the sight glass level indicator |  | OK | | Paseka Ditlhakanyane - 491468 | M3 |
| 10028 | R | Coolant Liquid Level is OK | | OK | | Paseka Ditlhakanyane - 491468 | M3 |

UNCONTROLLED WHEN PRINTED – Not to be used before verification of applicable version number.

© All rights reserved. Reproduction, use or disclosure to third parties, without express written authorization, is strictly prohibited.



Serial Tests Report
TS241 – M3 – VFT
RTR Vehicle Functional Static Testing Report

Document Reference
GIB0000007049
Version: A0

Emission date
23/08/2024

| | | | | | | | |
|-------|---|-------------|--|----|--|----------------------------------|----|
| 10029 | I | End of Test | | OK | | Paseka Ditlhakanyane - 491468 | M3 |
|-------|---|-------------|--|----|--|----------------------------------|----|

UNCONTROLLED WHEN PRINTED – Not to be used before verification of applicable version number.

© All rights reserved. Reproduction, use or disclosure to third parties, without express written authorization, is strictly prohibited.

Section 15 – Passenger Doors

15.1 Instructions list

15.1.1 050_DOR-Passenger Doors

I - Information A - Action R - Result NE - Not Executed

| N° | Type | Instruction | File | Result status | Result value | Operator | Vehicle |
|-------|------|---|------|---------------|--------------|---------------------------------------|---------|
| 10001 | I | Passenger Doors (SPP=050) | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10002 | I | Initial conditions | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10003 | I | 110Vdc Normal power supply is connected to the vehicle and ON | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10004 | I | Circuit Breaker | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10005 | A | Close Circuit Breaker 50Q1 | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10006 | R | DCU 1 is powered ON | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10007 | R | Check on the DDU that DCU1 is online | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10008 | A | Close Circuit Breaker 50Q2 | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10009 | R | DCU 2 is powered ON | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10010 | R | Check on the DDU that DCU2 is online | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10011 | A | Close Circuit Breaker 50Q3 | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10012 | R | DCU 3 is powered ON | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10013 | R | Check on the DDU that DCU3 is online | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10014 | A | Close Circuit Breaker 50Q4 | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10015 | R | DCU 4 is powered ON | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10016 | R | Check on the DDU that DCU4 is online | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10017 | A | Close Circuit Breaker 50Q5 | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10018 | R | DCU 5 is powered ON | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10019 | R | Check on the DDU that DCU5 is online | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10020 | A | Close Circuit Breaker 50Q6 | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10021 | R | DCU 6 is powered ON | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |

UNCONTROLLED WHEN PRINTED – Not to be used before verification of applicable version number.

© All rights reserved. Reproduction, use or disclosure to third parties, without express written authorization, is strictly prohibited.

| | | | | | | | |
|-------|---|---|---|----|--|---------------------------------------|----|
| 10022 | R | Check on the DDU that DCU6 is online | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10023 | A | Close Circuit Breaker 50Q7 | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10024 | I | Car ID Code | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10025 | A | Using the DDU on the test bench, check that all the doors on M4 are available - as in the picture below |  | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10026 | R | All doors are available | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10027 | I | Train Lines and Safety Loop | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10028 | A | ERTMS Auth Left Train Lines Check continuity between END1 90XR15 pin 44 END2 90XP25 pin 44 | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10029 | R | Both points are continuous | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10030 | A | ERTMS Auth Right Train Lines Check continuity between END1 90XR15 pin 47 END2 90XP25 pin 47 | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10031 | R | Both points are continuous | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10032 | A | Doors Open Train Lines Check continuity between END1 90XR15 pin 66 END2 90XP25 pin 66 | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10033 | R | Both points are continuous | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10034 | A | Door Close Right Train Lines Check continuity between END1 90XR15 pin 78 END2 90XP25 pin 78 | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10035 | A | Both points are continuous | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10036 | A | Door Close Left Train Lines Check continuity between END1 90XR15 pin 79 END2 90XP25 pin 79 | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10037 | R | Both points are continuous | | OK | | Hlawulani Nick Mabundzane - 418320 | M3 |

| | | | | | |
|-------|---|---|----|---------------------------------------|----|
| 10038 | A | Door Auth Left Train Lines Check continuity between END1 90XR15 pin 85 END2 90XP25 pin 85 | OK | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10039 | R | Both points are continuous | OK | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10040 | A | Door Auth Right Train Lines Check continuity between END1 90XR15 pin 84 END2 90XP25 pin 84 | OK | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10041 | R | Both points are continuous | OK | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10042 | A | V<3km/h Train Lines Check continuity between END1 90XR15 pin 29 END2 90XP25 pin 29 | OK | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10043 | R | Both points are continuous | OK | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10044 | A | Door Auth Left Train Lines Check continuity between END1 90XR15 pin 85 END2 90XP25 pin 85 | OK | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10045 | R | Both points are continuous | OK | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10046 | A | Door Auth Right Train Lines Check continuity between END1 90XR15 pin 84 END2 90XP25 pin 84 | OK | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10047 | R | Both points are continuous | OK | Hlawulani Nick Mabundzane - 418320 | M3 |
| 10048 | A | Safety Doors Loop Train Lines Check continuity between END1 90XR15 pin 96 END2 90XP25 pin 96 | OK | Paseka Ditlhakanyane - 491468 | M3 |
| 10049 | R | Both points are continuous | OK | Paseka Ditlhakanyane - 491468 | M3 |
| 10050 | I | Left Side Doors | OK | Paseka Ditlhakanyane - 491468 | M3 |
| 10051 | I | Door 1 | OK | Paseka Ditlhakanyane - 491468 | M3 |
| 10052 | I | Use bridge pieces to apply voltage on the passenger door mechanism to simulate the following signals: - Door Auth Left | OK | Paseka Ditlhakanyane - 491468 | M3 |

| | | | | | | | |
|-------|---|---|----|------|--|-------------------------------|----|
| | | - Door Open Left - V<3km/h | | | | | |
| 10053 | A | Apply bridge pieces on 50XP1_X11 between slot 2,3,4 and 15 | OK | | | Paseka Ditlhakanyane - 491468 | M3 |
| 10054 | A | Force [TT] (MPU1) lo_dor_m3opendoorleft = 1.00 | OK | | | Paseka Ditlhakanyane - 491468 | M3 |
| 10055 | R | Check that the door opens in 3 sec (+1/-0) | OK | | | Paseka Ditlhakanyane - 491468 | M3 |
| 10056 | R | Check that the GREEN LED on both sides of the door blink while the door opens [Safety Request: Prasa8-05] | OK | | | Paseka Ditlhakanyane - 491468 | M3 |
| 10057 | I | Door Opening Gap | OK | | | Paseka Ditlhakanyane - 491468 | M3 |
| 10058 | A | Measure the opening gap of the door. (This measurement must be done at the BOTTOM of the door) | OK | | | Paseka Ditlhakanyane - 491468 | M3 |
| 10059 | R | Door 1 gap Result Min/Max: 1390<= x <= 1410 (mm) | OK | 1394 | | Paseka Ditlhakanyane - 491468 | M3 |
| 10060 | A | Measure the opening gap of the door. (This measurement must be done at the top of the door) | OK | | | Paseka Ditlhakanyane - 491468 | M3 |
| 10061 | R | Door 1 gap Result Min/Max: 1390<= x <= 1410 (mm) | OK | 1400 | | Paseka Ditlhakanyane - 491468 | M3 |
| 10062 | A | Measure the opening gap of the door. (This measurement must be done in the middle of the door) | OK | | | Paseka Ditlhakanyane - 491468 | M3 |
| 10063 | R | Door 1 gap Result Min/Max: 1390<= x <= 1410 (mm) | OK | 1395 | | Paseka Ditlhakanyane - 491468 | M3 |
| 10064 | I | Door 3 | OK | | | Paseka Ditlhakanyane - 491468 | M3 |
| 10065 | A | Measure the opening gap of the door. (This measurement must be done at the BOTTOM of the door) | OK | | | Paseka Ditlhakanyane - 491468 | M3 |
| 10066 | R | Door 3 gap Result Min/Max: 1390<= x <= 1410 (mm) | OK | 1397 | | Paseka Ditlhakanyane - 491468 | M3 |
| 10067 | A | Measure the opening gap of the door. (This measurement must be done at the top of the door) | OK | | | Paseka Ditlhakanyane - 491468 | M3 |
| 10068 | R | Door 3 gap Result Min/Max: 1390<= x <= 1410 (mm) | OK | 1402 | | Paseka Ditlhakanyane - 491468 | M3 |
| 10069 | A | Measure the opening gap of the door. (This measurement must be done in the middle of the door) | OK | | | Paseka Ditlhakanyane - 491468 | M3 |
| 10070 | R | Door 3 gap Result Min/Max: 1390<= x <= 1410 (mm) | OK | 1400 | | Paseka Ditlhakanyane - 491468 | M3 |

| | | | | | | | |
|-------|---|--|--|----|------|-------------------------------|----|
| 10071 | I | Door 5 | | OK | | Paseka Ditlhakanyane - 491468 | M3 |
| 10072 | I | Door Opening Gap | | OK | | Paseka Ditlhakanyane - 491468 | M3 |
| 10073 | A | Measure the opening gap of the door. (This measurement must be done at the BOTTOM of the door) | | OK | | Paseka Ditlhakanyane - 491468 | M3 |
| 10074 | R | Door 5 gap Result Min/Max: 1390<= x <= 1410 (mm) | | OK | 1398 | Paseka Ditlhakanyane - 491468 | M3 |
| 10075 | A | Measure the opening gap of the door. (This measurement must be done at the top of the door) | | OK | | Paseka Ditlhakanyane - 491468 | M3 |
| 10076 | R | Door 5 gap Result Min/Max: 1390<= x <= 1410 (mm) | | OK | 1405 | Paseka Ditlhakanyane - 491468 | M3 |
| 10077 | A | Measure the opening gap of the door. (This measurement must be done in the middle of the door) | | OK | | Paseka Ditlhakanyane - 491468 | M3 |
| 10078 | R | Door 5 gap Result Min/Max: 1390<= x <= 1410 (mm) | | OK | 1400 | Paseka Ditlhakanyane - 491468 | M3 |
| 10079 | I | Right Side Doors | | OK | | Paseka Ditlhakanyane - 491468 | M3 |
| 10080 | I | Door 2 | | OK | | Paseka Ditlhakanyane - 491468 | M3 |
| 10081 | A | Use bridge pieces to apply voltage on the passenger door mechanism to simulate the following signals: - Door Auth Right - Door Open Right - V<3km/h | | OK | | Paseka Ditlhakanyane - 491468 | M3 |
| 10082 | A | Apply bridge pieces on 50XP2_X11 between slot 2,3,4 and 15 | | OK | | Paseka Ditlhakanyane - 491468 | M3 |
| 10083 | A | Force [TT] (MPU1) lo_dor_m3opendoorright = 1.00 | | OK | | Paseka Ditlhakanyane - 491468 | M3 |
| 10084 | R | Check that the door opens in 3 sec (+1/-0) | | OK | | Paseka Ditlhakanyane - 491468 | M3 |
| 10085 | R | Check that the GREEN LED on both sides of the door blink while the door opens. [Safety Request: Prasa8-05] | | OK | | Paseka Ditlhakanyane - 491468 | M3 |
| 10086 | I | Door Opening Gap | | OK | | Paseka Ditlhakanyane - 491468 | M3 |
| 10087 | A | Measure the opening gap of the door. (This measurement must be done at the BOTTOM of the door). | | OK | | Paseka Ditlhakanyane - 491468 | M3 |
| 10088 | R | Door 2 gap Result Min/Max: 1390<= x <= 1410 (mm) | | OK | 1398 | Paseka Ditlhakanyane - 491468 | M3 |
| 10089 | A | Measure the opening gap of the door. (This measurement must be done at the | | OK | | Paseka Ditlhakanyane - 491468 | M3 |

| | | | | | | | |
|-------|---|--|----|------|----------------------------------|----|--|
| | | top of the door) | | | | | |
| 10090 | R | Door 2 gap Result Min/Max: 1390<= x <= 1410 (mm) | OK | 1405 | Paseka Ditlhakanyane - 491468 | M3 | |
| 10091 | A | Measure the opening gap of the door. (This measurement must be done in the middle of the door) | OK | | Paseka Ditlhakanyane - 491468 | M3 | |
| 10092 | R | Door 2 gap Result Min/Max: 1390<= x <= 1410 (mm) | OK | 1401 | Paseka Ditlhakanyane - 491468 | M3 | |
| 10093 | I | Door 4 | OK | | Paseka Ditlhakanyane - 491468 | M3 | |
| 10094 | I | Door Opening Gap | OK | | Paseka Ditlhakanyane - 491468 | M3 | |
| 10095 | A | Measure the opening gap of the door. (This measurement must be done at the BOTTOM of the door) | OK | | Paseka Ditlhakanyane - 491468 | M3 | |
| 10096 | R | Door 4 gap Result Min/Max: 1390<= x <= 1410 (mm) | OK | 1397 | Paseka Ditlhakanyane - 491468 | M3 | |
| 10097 | A | Measure the opening gap of the door. (This measurement must be done at the top of the door) | OK | | Paseka Ditlhakanyane - 491468 | M3 | |
| 10098 | R | Door 4 gap Result Min/Max: 1390<= x <= 1410 (mm) | OK | 1403 | Paseka Ditlhakanyane - 491468 | M3 | |
| 10099 | A | Measure the opening gap of the door. (This measurement must be done in the middle of the door) | OK | | Paseka Ditlhakanyane - 491468 | M3 | |
| 10100 | R | Door 4 gap Result Min/Max: 1390<= x <= 1410 (mm) | OK | 1400 | Paseka Ditlhakanyane - 491468 | M3 | |
| 10101 | I | Door 6 | OK | | Paseka Ditlhakanyane - 491468 | M3 | |
| 10102 | I | Door Opening Gap | OK | | Paseka Ditlhakanyane - 491468 | M3 | |
| 10103 | A | Measure the opening gap of the door. (This measurement must be done at the BOTTOM of the door) | OK | | Paseka Ditlhakanyane - 491468 | M3 | |
| 10104 | R | Door 6 gap Result Min/Max: 1390<= x <= 1410 (mm) | OK | 1396 | Paseka Ditlhakanyane - 491468 | M3 | |
| 10105 | A | Measure the opening gap of the door. (This measurement must be done at the top of the door) | OK | | Paseka Ditlhakanyane - 491468 | M3 | |
| 10106 | R | Door 6 gap Result Min/Max: 1390<= x <= 1410 (mm) | OK | 1402 | Paseka Ditlhakanyane - 491468 | M3 | |
| 10107 | A | Measure the opening gap of the door. (This measurement must be done in the middle of the door) | OK | | Paseka Ditlhakanyane - 491468 | M3 | |
| 10108 | R | Door 6 gap Result Min/Max: 1390<= x <= 1410 (mm) | OK | 1399 | Paseka Ditlhakanyane - 491468 | M3 | |

| | | | | | | | |
|-------|---|--|--|----|--|-------------------------------|----|
| 10109 | I | Obstacle Detection | | OK | | Paseka Ditlhakanyane - 491468 | M3 |
| 10110 | A | Position an obstacle on the floor in the centre of the door closing line for all the doors | | OK | | Paseka Ditlhakanyane - 491468 | M3 |
| 10111 | A | Remove the bridge piece on 50XP1_X11 pin 2 | | OK | | Paseka Ditlhakanyane - 491468 | M3 |
| 10112 | A | Remove the bridge piece on 50XP2_X11 pin 2 | | OK | | Paseka Ditlhakanyane - 491468 | M3 |
| 10113 | R | The doors will hit the obstacle, reopen and try to close again 3 times. On the third attempt it will stop and stand ajar - free to be opened manually | | OK | | Paseka Ditlhakanyane - 491468 | M3 |
| 10114 | A | Safety Doors Loop Train Lines Check continuity between END1 90XR15 pin 96 END2 90XP25 pin 96 | | OK | | Paseka Ditlhakanyane - 491468 | M3 |
| 10115 | R | There is no continuity between the two points | | OK | | Paseka Ditlhakanyane - 491468 | M3 |
| 10116 | A | Put back the bridge piece on 50XP1_X11 pin 2 | | OK | | Paseka Ditlhakanyane - 491468 | M3 |
| 10117 | A | Put back the bridge piece on 50XP2_X11 pin 2 | | OK | | Paseka Ditlhakanyane - 491468 | M3 |
| 10118 | R | The door opens fully | | OK | | Paseka Ditlhakanyane - 491468 | M3 |
| 10119 | A | Remove the obstacle | | OK | | Paseka Ditlhakanyane - 491468 | M3 |
| 10120 | A | Release [TT] (MPU1) lo_dor_m3opendoorleft | | OK | | Paseka Ditlhakanyane - 491468 | M3 |
| 10121 | A | Release [TT] (MPU1) lo_dor_m3opendoorright | | OK | | Paseka Ditlhakanyane - 491468 | M3 |
| 10122 | A | Remove the bridge pieces on connector 50XP1_X11 | | OK | | Paseka Ditlhakanyane - 491468 | M3 |
| 10123 | A | Remove the bridge pieces on connector 50XP2_X11 | | OK | | Paseka Ditlhakanyane - 491468 | M3 |



Serial Tests Report
TS241 – M3 – VFT
RTR Vehicle Functional Static Testing Report

Document Reference
GIB0000007049
Version: A0

Emission date
23/08/2024

Section 16 – Vehicle Normalization

16.1 Instructions list

16.1.1 093_NORM-Vehicle Normalization

I - Information A - Action R - Result NE - Not Executed

| N° | Type | Instruction | File | Result status | Result value | Operator | Vehicle |
|-------|------|---|------|---------------|--------------|-------------------------------|---------|
| 10001 | R | On LV3 all Connectors are tightened | | OK | | Paseka Ditlhakanyane - 491468 | M3 |
| 10002 | I | Initial Conditions | | OK | | Paseka Ditlhakanyane - 491468 | M3 |
| 10003 | I | The VFT procedures are all completed | | OK | | Paseka Ditlhakanyane - 491468 | M3 |
| 10004 | I | Vehicle Normalization Check | | OK | | Paseka Ditlhakanyane - 491468 | M3 |
| 10005 | R | On LV3 all Circuit Breakers are installed and secured | | OK | | Paseka Ditlhakanyane - 491468 | M3 |
| 10006 | R | On LV3 all Dataplugs are installed, tightened and earth braids are fastened | | OK | | Paseka Ditlhakanyane - 491468 | M3 |
| 10007 | R | On LV3 there are no missing components, device, wiring or connectors. | | OK | | Paseka Ditlhakanyane - 491468 | M3 |
| 10008 | R | On LV6 all Dataplugs are installed, tightened and earth braids are fastened | | OK | | Paseka Ditlhakanyane - 491468 | M3 |
| 10009 | R | On LV6 all Connectors are tightened | | OK | | Paseka Ditlhakanyane - 491468 | M3 |
| 10010 | R | On LV6 there are no missing components, device, wiring or connectors. | | OK | | Paseka Ditlhakanyane - 491468 | M3 |
| 10011 | R | On HC Cubicle the Controller is installed and properly tightened and its connectors are tightened | | OK | | Paseka Ditlhakanyane - 491468 | M3 |
| 10012 | R | All DCUs are properly installed and secured | | OK | | Paseka Ditlhakanyane - 491468 | M3 |
| 10013 | R | All Internal Displays are properly installed and secured | | OK | | Paseka Ditlhakanyane - 491468 | M3 |
| 10014 | R | All Light Covers are properly installed | | OK | | Paseka Ditlhakanyane - 491468 | M3 |

UNCONTROLLED WHEN PRINTED – Not to be used before verification of applicable version number.

© All rights reserved. Reproduction, use or disclosure to third parties, without express written authorization, is strictly prohibited.

| | | | | | | | |
|-------|---|--|--|----|--|-------------------------------|----|
| 10015 | R | All Saloon Fire Detectors are properly installed and secured | | OK | | Paseka Ditlhakanyane - 491468 | M3 |
| 10016 | R | All covers are normalised inside the car | | OK | | Paseka Ditlhakanyane - 491468 | M3 |
| 10017 | R | On the Underframe, TBCU Agate is installed and properly tightened | | OK | | Paseka Ditlhakanyane - 491468 | M3 |
| 10018 | R | On the Underframe, Speed Sensors are installed and properly tightened | | OK | | Paseka Ditlhakanyane - 491468 | M3 |
| 10019 | R | On the LVB, all Circuit Breakers are installed and properly tightened | | OK | | Paseka Ditlhakanyane - 491468 | M3 |
| 10020 | R | On the LVB, all Relays and Timers are installed and properly tightened | | OK | | Paseka Ditlhakanyane - 491468 | M3 |
| 10021 | R | On the LVB, BRIOMs are installed and properly tightened | | OK | | Paseka Ditlhakanyane - 491468 | M3 |
| 10022 | R | On the LVB there are no missing components, device, wiring or connectors. | | OK | | Paseka Ditlhakanyane - 491468 | M3 |
| 10023 | R | On the Underframe, all Connectors are tightened | | OK | | Paseka Ditlhakanyane - 491468 | M3 |
| 10024 | R | All underframe covers are normalised | | OK | | Paseka Ditlhakanyane - 491468 | M3 |
| 10025 | R | On END1 the Octopus cables are disconnected from the car and properly stored. | | OK | | Paseka Ditlhakanyane - 491468 | M3 |
| 10026 | R | On END2 the Octopus cables are disconnected from the car and properly stored. | | OK | | Paseka Ditlhakanyane - 491468 | M3 |
| 10027 | R | The Test Bench is switched OFF and the Octopus cables are disconnected and properly stored | | OK | | Paseka Ditlhakanyane - 491468 | M3 |
| 10028 | R | ALL P. Os of this car are closed | | OK | | Sqiniseko Xulu - 493646 | M3 |
| 10029 | I | End Of Test | | OK | | Paseka Ditlhakanyane - 491468 | M3 |

Section 17 – Report summaries

17.1 Results status

| Test Instruction Sheet | Compliant | Incomplete | Non-compliant |
|---|-----------|------------|---------------|
| Vehicle Normalization | X | | |
| Train Ground Communication | X | | |
| Traction and Electric Brake | X | | |
| TCMS Network | X | | |
| Service Brake | X | | |
| Rescue Mode and Emergency Disconnection | X | | |
| Passenger Doors | X | | |
| PACIS System | X | | |
| Internal Lighting | X | | |
| Holding and Parking Brake | X | | |
| Fire Protection | X | | |
| Energy Distribution | X | | |
| Emergency Brake | X | | |
| Cabin Control | X | | |
| Air Condition | X | | |

17.2 Tools used.

| Function | Tool name | Tool number | Next Calibration date |
|----------|-------------|---------------|-----------------------|
| 015_NRG | NPhasemètre | Phasemeter | 8/25/2024 |
| 054_PIS | Multimetro | Multi-meter 2 | 8/23/2024 |
| 057_HVA | NPhasemètre | Phasemeter | 8/25/2024 |
| 062_ETS | Multimetro | Multi-meter 5 | 8/23/2024 |
| 067_FSD | Multimetro | Multi-meter 3 | 8/23/2024 |

| Vehicle | Equipment | Expected version | Version loaded |
|---------|-----------|------------------|----------------|
|---------|-----------|------------------|----------------|

UNCONTROLLED WHEN PRINTED – Not to be used before verification of applicable version number.

© All rights reserved. Reproduction, use or disclosure to third parties, without express written authorization, is strictly prohibited.



| | | |
|---|--|-----------------------------|
| Serial Tests Report TS241 – M3 – VFT RTR Vehicle Functional Static Testing Report | Document Reference GIB0000007049 Version: A0 | Emission date 23/08/2024 |
|---|--|-----------------------------|

| | | | |
|----|--|--|--|
| M3 | | | |
|----|--|--|--|