

PROJECT	CUSTOMER	VEHICLE
Xtrapolis-PRASA	PRASA	310 – M3 – VFT

RTR Vehicle Functional Static Testing TS310 M3 Report
 GIB0000008857



 
	CREATED	VERIFIED	APPROVED	DISTRIBUTION
Name	Vusumuzi ZULU	Lindane Ngubane	Kgomotso NKOANA	Confidentiality Category <i>Restricted</i> <i>Project</i> <i>Normal</i> <input type="checkbox"/> <input type="checkbox"/> <input checked="" type="checkbox"/>
Date	10/11/2025	10/11/2025	10/11/2025	Control Category <i>Controlled</i> <i>Not Controlled</i> <input checked="" type="checkbox"/> <input type="checkbox"/>
Signature				Language EN

This report has been automatically generated from TES version 1

Table of modifications

Rev	Date	Modifications Content	Writer
A0	10/11/2025	Creation	Vusumuzi ZULU

Internal validations

	Name	Function	Date	Signature
Creator	Vusumuzi ZULU	EPU Manager	10/11/2025	X  Vusumuzi ZULU EPU Manager
Verifier	Lindane Ngubane	Serial Test Manager	10/11/2025	X  Lindani Ngubane Serial Test Manager
Approver	Kgomotso NKOANA	Test Expert	10/11/2025	X  Kgomotso NKOANA Test Expert

Execution Plan

Start Date	30/10/2025
End Date	30/10/2025

Contents

Section 1 - Purpose / Objectives

Section 2 – Energy Distribution

- 2.1 Climatic Conditions and Test Means
- 2.2 Description of the tests, characteristics to be measured, observed
- 2.3 Instructions list
 - 2.3.1 Energy Distribution

Section 3 – TCMS Network

- 3.1 Climatic Conditions and Test Means
- 3.2 Description of the tests, characteristics to be measured, observed
- 3.3 Instructions list
 - 3.3.1 TCMS Network

Section 4 – Cabin Control

- 4.1 Climatic Conditions and Test Means
- 4.2 Description of the tests, characteristics to be measured, observed
- 4.3 Instructions list
 - 4.3.1 Cabin Control

Section 5 – Internal Lighting

- 5.1 Climatic Conditions and Test Means
- 5.2 Description of the tests, characteristics to be measured, observed
- 5.3 Instructions list
 - 5.3.1 Internal Lighting

Section 6 – PACIS System

- 6.1 Climatic Conditions and Test Means
- 6.2 Description of the tests, characteristics to be measured, observed
- 6.3 Instructions list
 - 6.3.1 PACIS System

Section 7 – Train Ground Communication

- 7.1 Climatic Conditions and Test Means
- 7.2 Description of the tests, characteristics to be measured, observed
- 7.3 Instructions list
 - 7.3.1 ERTMS

Section 8 – Rescue Mode and Emergency Disconnection

- 8.1 Climatic Conditions and Test Means
- 8.2 Description of the tests, characteristics to be measured, observed
- 8.3 Instructions list
 - 8.3.1 Rescue Mode and Emergency Disconnection

Section 9 – Emergency Brake

- 9.1 Climatic Conditions and Test Means
- 9.2 Description of the tests, characteristics to be measured, observed
- 9.3 Instructions list
 - 9.3.1 Emergency Brake

Section 10 – Service Brake

- 10.1 Climatic Conditions and Test Means
- 10.2 Description of the tests, characteristics to be measured, observed
- 10.3 Instructions list
 - 10.3.1 Service Brake

Section 11 – Holding and Parking Brake

- 11.1 Climatic Conditions and Test Means
- 11.2 Description of the tests, characteristics to be measured, observed
- 11.3 Instructions list
 - 11.3.1 Holding and Parking Brake

Section 12 – Passenger Doors

- 12.1 Climatic Conditions and Test Means
- 12.2 Description of the tests, characteristics to be measured, observed
- 12.3 Instructions list
 - 12.3.1 Passenger Doors

Section 13 – HVAC Air Condition

- 13.1 Climatic Conditions and Test Means
- 13.2 Description of the tests, characteristics to be measured, observed
- 13.3 Instructions list
 - 13.3.1 HVAC_TK
 - 13.3.2 HVAC_SME

Section 14 – Fire Protection

- 14.1 Climatic Conditions and Test Means
- 14.2 Description of the tests, characteristics to be measured, observed
- 14.3 Instructions list
 - 14.3.1 Fire Protection

Section 15 – Traction and Electric Brake

- 15.1 Climatic Conditions and Test Means
- 15.2 Description of the tests, characteristics to be measured, observed
- 15.3 Instructions list
 - 15.3.1 Traction and Electric Brake

Section 16 – Vehicle Normalization

- 16.1 Climatic Conditions and Test Means
- 16.2 Description of the tests, characteristics to be measured, observed
- 16.3 Instructions list
 - 16.3.1 Vehicle Normalization

Section 17 - Report summaries

- 17.1 Vehicle information
- 17.2 Results status
- 17.3 Summary statement
- 17.4 Tools used
- 17.5 Software configuration
- 17.6 Open Points
- 17.7 Validation

Section 1 – Purpose / Objectives

1. Energy Distribution

Ensure the distribution of 110Vdc and 400Vac through the vehicle from the battery and Auxiliary converter

2. TCMS Network

Verify the working of the TCMS network and its core elements, i.e TRS, CRS.

3. Cabin Control

Verify the cabin control functions in both normal and backup modes, their commanding of the train lines, and the TCMS response to each function.

4. Internal Lighting

Verify the working of all internal lighting functions.

5. PACIS System

Verify power supply to all PACIS network equipment.

6. Train-Ground Communication

Setup the Train-to-ground systems, and verify correct installation of the antennas by VSWR test.

7. Rescue Mode and Emergency Disconnection

The objective of this procedure is to verify the correct operation of the emergency disconnection function, as well as the correct activation of the Back-Up mode.

10. Emergency Brake

The objective of this procedure is to verify all electrical components of the Emergency braking system.

11. Service Brake

The objective of this procedure is to verify all electrical components of the Service brake system.

12. Holding and Parking Brake

The objective of this procedure is to verify all electrical components of the Parking/holding brake system.

13. Passenger Doors

The objective of this procedure is to ensure the proper operation of the train doors.

14. Air Conditioning

Verify the voltage distribution to and correct operation of the HVAC system

15. Fire protection

The objective of this procedure is to verify the configuration of the fire detection units, as well as the presence of the safety resistor in the auxiliary converter.

16. Traction and Electric Brake

The objective of this procedure is to verify all the train lines associated with the traction and electric brake systems of the train

18. Vehicle Normalization

The objective of this procedure is to ensure that all connectors, panels and covers are normalized.



Serial Tests Report TS310 – M3 – VFT RTR Vehicle Functional Static Testing Report	Document Reference GIB0000008857 Version: A0	Emission date 10/11/2025
---	--	-----------------------------



Serial Tests Report
TS310 – M3 – VFT
RTR Vehicle Functional Static Testing Report

Document Reference
GIB0000008857
Version: A0

Emission date
10/11/2025

Section 2 – Energy Distribution

2.1 Climatic Conditions and Test Means

- Environmental conditions:
- Tests means:
- Equipment:

2.2 Description of the tests, characteristics to be measured, observed

2.3 Instructions list

2.3.1 Energy Distribution

I - Information A - Action R - Result NE - Not Executed

N°	Type	Instruction	File	Result status	Result value	Operator	Vehicle
10001	I	Energy Distribution (SPP=015)		OK		Mbavhalelo Funyufunyu 484649 30.10.2025	M3
10002	I	Initial Conditions		OK		Mbavhalelo Funyufunyu 484649 30.10.2025	M3
10003	I	All the Circuit Breakers should be OPEN		OK		Mbavhalelo Funyufunyu 484649 30.10.2025	M3
10004	I	Test bench should be connected but with no power supply		OK		Mbavhalelo Funyufunyu 484649 30.10.2025	M3
10005	I	NO 400Vac should be connected to the car		OK		Mbavhalelo Funyufunyu 484649 30.10.2025	M3
10006	A	Close Circuit Breaker 15Q3 (Normal Line)		OK		Mbavhalelo Funyufunyu 484649 30.10.2025	M3
10007	I	Voltage Isolation 110Vdc		OK		Mbavhalelo Funyufunyu 484649 30.10.2025	M3
10008	I	230Vac and 400Vac Circuit breaker		OK		Mbavhalelo Funyufunyu 484649 30.10.2025	M3
10009	A	Close Circuit Breaker 13Q1		OK		Mbavhalelo Funyufunyu 484649 30.10.2025	M3
10010	A	Close the circuit breaker 13Q3		OK		Mbavhalelo Funyufunyu 484649 30.10.2025	M3
10011	I	Normal and Permanent Power Supply		OK		Mbavhalelo Funyufunyu 484649 30.10.2025	M3
10012	I	110Vdc Permanent Train Line Apply 110Vdc on -93XT304_1 pin 4 to simulate Permanent Train Line		OK		Mbavhalelo Funyufunyu 484649 30.10.2025	M3

10013	A	Apply 110Vdc on the Normal Line using the external power supply	OK	Mbavhalelo Funyufunyu 484649 30.10.2025	M3
10014	A	Measure 110Vdc between 90XR50.X1/1 (+) and 90XR50.X2/1 (-) (intercar connector). [Normal line]	OK	Mbavhalelo Funyufunyu 484649 30.10.2025	M3
10015	I	Permanent Line Circuit Breaker	OK	Mbavhalelo Funyufunyu 484649 30.10.2025	M3
10016	A	Close Circuit Breaker 15Q4 for battery voltage above 80Vdc and close it(permanent Line)	OK	Mbavhalelo Funyufunyu 484649 30.10.2025	M3
10017	I	230Vac Circuit Breaker	OK	Mbavhalelo Funyufunyu 484649 30.10.2025	M3
10018	A	Close Circuit Breaker 13Q2	OK	Mbavhalelo Funyufunyu 484649 30.10.2025	M3
10019	A	Close Circuit Breaker 13Q3	OK	Mbavhalelo Funyufunyu 484649 30.10.2025	M3
10020	I	230Vac and 400Vac Voltage Supply	OK	Mbavhalelo Funyufunyu 484649 30.10.2025	M3
10021	A	Apply 400Vac to the Vehicle, either on End1 or End2	OK	Mbavhalelo Funyufunyu 484649 30.10.2025	M3
10022	A	Perform a phase rotation measurement on Connector 90XR62 between phases U(X3),V(X2),W(X1) and ensure the rotation is in the correct direction.	OK	Mbavhalelo Funyufunyu 484649 30.10.2025	M3
10023	R	Phase rotation between U,V,W is correct	OK	Mbavhalelo Funyufunyu 484649 30.10.2025	M3
10024	A	Perform a phase rotation measurement on Connector 90XR52 between phases U(X1),V(X2),W(X3) and ensure the rotation is in the correct direction	OK	Mbavhalelo Funyufunyu 484649 30.10.2025	M3
10025	R	Phase rotation between U,V,W is correct	OK	Mbavhalelo Funyufunyu 484649 30.10.2025	M3
10026	A	Check 230Vac between points L and N of socket -13XT1	OK	Mbavhalelo Funyufunyu 484649 30.10.2025	M3

10027	R	230Vac present		OK		Mbavhalelo Funyufunyu 484649 30.10.2025	M3
10028	A	Check 230Vac between points L and N of socket -13XT2		OK		Mbavhalelo Funyufunyu 484649 30.10.2025	M3
10029	R	230Vac present		OK		Mbavhalelo Funyufunyu 484649 30.10.2025	M3
10030	A	Remove connector 57XP1_10		OK		Mbavhalelo Funyufunyu 484649 30.10.2025	M3
10031	A	Remove connector 93XP150		OK		Mbavhalelo Funyufunyu 484649 30.10.2025	M3
10032	A	Close circuit breaker 34Q1 and 57Q1		OK		Mbavhalelo Funyufunyu 484649 30.10.2025	M3
10033	A	Check 400Vac +-5% tolerance between Phases (W,V,U) on connector 57XP1_10 (10.b1,10a2,10a1)		OK		Mbavhalelo Funyufunyu 484649 30.10.2025	M3
10034	R	400Vac +- 5% tolerance is measured between all three phases of 57XP1_10		OK		Mbavhalelo Funyufunyu 484649 30.10.2025	M3
10035	A	Check 400Vac +-5% tolerance between Phases (W,V,U) on connector 93XP150 (E2,E3,E1)		OK		Mbavhalelo Funyufunyu 484649 30.10.2025	M3
10036	R	400Vac +- 5% tolerance is measured between all three phases on connector 93XP150		OK		Mbavhalelo Funyufunyu 484649 30.10.2025	M3
10037	A	Put back connector 57XP1_10		OK		Mbavhalelo Funyufunyu 484649 30.10.2025	M3
10038	A	Put back connector 93XP150		OK		Mbavhalelo Funyufunyu 484649 30.10.2025	M3
10039	A	Switch off the 400Vac power supply from the socket		OK		Mbavhalelo Funyufunyu 484649 30.10.2025	M3
10040	I	Auxiliary Converters Command		OK		Mbavhalelo Funyufunyu 484649 30.10.2025	M3

10041	A	Battery Connection Train Lines Measure continuity between END 1 90XR14 pin 30 END 2 90XP24 pin 30		OK		Mbavhalelo Funyufunyu 484649 30.10.2025	M3
10042	R	Both points are continuous		OK		Mbavhalelo Funyufunyu 484649 30.10.2025	M3
10043	A	Battery Disconnection Train Lines Measure continuity between END 1 90XR14 pin 31 END 2 90XP24 pin 31		OK		Mbavhalelo Funyufunyu 484649 30.10.2025	M3
10044	R	Both points are continuous		OK		Mbavhalelo Funyufunyu 484649 30.10.2025	M3
10045	A	IES StatusTrain Lines Measure continuity between END 1 90XR15 pin 61 END 2 90XP25 pin 61 and END 1 90XR15 pin 62 END 2 90XP25 pin 62		OK		Mbavhalelo Funyufunyu 484649 30.10.2025	M3
10046	R	Both points are continuous		OK		Mbavhalelo Funyufunyu 484649 30.10.2025	M3
10047	I	END OF TEST		OK		Mbavhalelo Funyufunyu 484649 30.10.2025	M3



Serial Tests Report
TS310 – M3 – VFT
RTR Vehicle Functional Static Testing Report

Document Reference
GIB0000008857
Version: A0

Emission date
10/11/2025

Section 3 – TCMS Network

3.1 Climatic Conditions and Test Means

- Environmental conditions:
- Tests means:
- Equipment:

3.2 Description of the tests, characteristics to be measured, observed

3.3 Instructions list

3.3.1 TCMS Network

I - Information A - Action R - Result NE - Not Executed

N°	Type	Instruction	File	Result status	Result value	Operator	Vehicle
10001	I	TCMS Network (SPP=25)		OK		Mbavhalelo Funyufunyu 484649 30.10.2025	M3
10002	I	Initial conditions		OK		Mbavhalelo Funyufunyu 484649 30.10.2025	M3
10003	I	Vehicle test bench should be configured as TC1: 1. TC1 Dataplugs 2. MCE switch set to TC1		OK		Mbavhalelo Funyufunyu 484649 30.10.2025	M3
10004	A	110Vdc supply to the Normal Train line is ON		OK		Mbavhalelo Funyufunyu 484649 30.10.2025	M3
10005	I	Power Supply to the Router Switches		OK		Mbavhalelo Funyufunyu 484649 30.10.2025	M3
10006	I	Power supply to the 25A10 SWITCH ETHERNET (CRS1)		OK		Mbavhalelo Funyufunyu 484649 30.10.2025	M3
10007	A	Close Circuit Breaker 25Q10		OK		Mbavhalelo Funyufunyu 484649 30.10.2025	M3
10008	R	CRS1 25A10 is ON		OK		Mbavhalelo Funyufunyu 484649 30.10.2025	M3
10009	I	Power supply to the 25A11 SWITCH ETHERNET (CRS2)		OK		Mbavhalelo Funyufunyu 484649 30.10.2025	M3
10010	A	Close Circuit Breaker 25Q11		OK		Mbavhalelo Funyufunyu 484649 30.10.2025	M3
10011	R	CRS2 25A11 is ON		OK		Mbavhalelo Funyufunyu 484649 30.10.2025	M3
10012	I	Power supply to the 25A14 ETHERNET REPEATER (TBR)		OK		Mbavhalelo Funyufunyu 484649 30.10.2025	M3

10013	A	Close Circuit Breaker 25Q14	OK	Mbavhalelo Funyufunyu 484649 30.10.2025	M3
10014	R	TBR 25A14 is ON	OK	Mbavhalelo Funyufunyu 484649 30.10.2025	M3
10015	A	Close Circuit Breaker 25Q6	OK	Mbavhalelo Funyufunyu 484649 30.10.2025	M3
10016	A	Close Circuit Breaker 25Q7	OK	Mbavhalelo Funyufunyu 484649 30.10.2025	M3
10017	I	Ethernet Loop	OK	Mbavhalelo Funyufunyu 484649 30.10.2025	M3
10018	A	For each CRS, check that the Ethernet Loop LEDs are flashing	OK	Mbavhalelo Funyufunyu 484649 30.10.2025	M3
10019	R	CRS1 has LEDs on ports X3 and X4 flashing	OK	Mbavhalelo Funyufunyu 484649 30.10.2025	M3
10020	R	CRS2 has ONLY LED on port X4 flashing	OK	Mbavhalelo Funyufunyu 484649 30.10.2025	M3
10021	R	Check on the Test Bench DDU that all Router Switches are available on the network	OK	Mbavhalelo Funyufunyu 484649 30.10.2025	M3
10022	I	Power Supply to the BRIOMS	OK	Mbavhalelo Funyufunyu 484649 30.10.2025	M3
10023	I	Power supply to the 25A6 BRIOM 40/10 ETH 6	OK	Mbavhalelo Funyufunyu 484649 30.10.2025	M3
10024	R	BRIOM 25A6 is ON	OK	Mbavhalelo Funyufunyu 484649 30.10.2025	M3
10025	A	Check visually that ground braid is connected to BRIOM.	OK	Mbavhalelo Funyufunyu 484649 30.10.2025	M3
10026	I	Power supply to the 25A7 BRIOM 40/10 ETH 7	OK	Mbavhalelo Funyufunyu 484649 30.10.2025	M3

10027	R	BRIOM 25A7 is ON		OK		Mbavhalelo Funyufunyu 484649 30.10.2025	M3
10028	A	Check visually that ground braid is connected to BRIOM		OK		Mbavhalelo Funyufunyu 484649 30.10.2025	M3
10029	I	END OF TEST		OK		Mbavhalelo Funyufunyu 484649 30.10.2025	M3



Serial Tests Report TS310 – M3 – VFT RTR Vehicle Functional Static Testing Report	Document Reference GIB0000008857 Version: A0	Emission date 10/11/2025
---	--	-----------------------------

Section 4 – Cabin Control

4.1 Climatic Conditions and Test Means

- Environmental conditions:
- Tests means:
- Equipment:

4.2 Description of the tests, characteristics to be measured, observed

4.3 Instructions list

4.3.1 Cabin Control

I - Information A - Action R - Result NE - Not Executed

N°	Type	Instruction	File	Result status	Result value	Operator	Vehicle
10001	I	Cabin Control (SPP=020)		OK		Mlungisi Madela 529927 30.10.2025	M3
10002	I	Train Lines		OK		Mlungisi Madela 529927 30.10.2025	M3
10003	A	Cab Selected On Train - Train Lines Measure continuity between END1 90XR14 pin 3 END2 90XP24 pin 3		OK		Mlungisi Madela 529927 30.10.2025	M3
10004	R	Both pins are continuous		OK		Mlungisi Madela 529927 30.10.2025	M3
10005	A	Cab Active TC1 Train Lines Measure continuity between END1 90XR14 pin 4 END2 90XP24 pin 4		OK		Mlungisi Madela 529927 30.10.2025	M3
10006	R	Both pins are continuous.		OK		Mlungisi Madela 529927 30.10.2025	M3
10007	A	Cab Active TC2 Train Lines Measure continuity between END1 90XR14 pin 5 END2 90XP24 pin 5		OK		Mlungisi Madela 529927 30.10.2025	M3
10008	R	Both pins are continuous		OK		Mlungisi Madela 529927 30.10.2025	M3
10009	A	Master Key TC1 Train Lines Measure continuity between END1 90XR14 pin 17 END2 90XP24 pin 17		OK		Mlungisi Madela 529927 30.10.2025	M3
10010	R	Both pins are continuous		OK		Mlungisi Madela 529927 30.10.2025	M3
10011	I	END OF TEST		OK		Mlungisi Madela 529927 30.10.2025	M3

Section 5 – Internal Lighting

5.1 Climatic Conditions and Test Means

- Environmental conditions:
- Tests means:
- Equipment:

5.2 Description of the tests, characteristics to be measured, observed

5.3 Instructions list

5.3.1 Internal Lighting

I - Information A - Action R - Result NE - Not Executed

N°	Type	Instruction	File	Result status	Result value	Operator	Vehicle
10001	I	Internal Lighting (SPP=52)		OK		Mlungisi Madela 529927 30.10.2025	M3
10002	I	Initial Conditions		OK		Mlungisi Madela 529927 30.10.2025	M3
10003	I	110Vdc Normal line is ON		OK		Mlungisi Madela 529927 30.10.2025	M3
10004	I	Cleaning Light Command		OK		Mlungisi Madela 529927 30.10.2025	M3
10005	A	110Vdc Permanent Train Line Apply 110V on 93XT304_1 pin 4 to simulate permanent supply		OK		Mlungisi Madela 529927 30.10.2025	M3
10006	A	Close Circuit Breaker 52Q3		OK		Mlungisi Madela 529927 30.10.2025	M3
10007	A	Close Circuit Breaker 52Q4		OK		Mlungisi Madela 529927 30.10.2025	M3
10008	A	Close Circuit Breaker 52Q5		OK		Mlungisi Madela 529927 30.10.2025	M3
10009	R	All saloon emergency lights (low intensity) are OFF on all light modules (Left + Right)		OK		Mlungisi Madela 529927 30.10.2025	M3
10010	A	Turn Cleaning Light Switch 52S6 to ON position.		OK		Mlungisi Madela 529927 30.10.2025	M3
10011	R	All saloon emergency lights (low intensity) are (ON) on all light modules (Left + Right)		OK		Mlungisi Madela 529927 30.10.2025	M3
10012	A	Reset Circuit Breaker 52Q5 (Open and Close)		OK		Mlungisi Madela 529927 30.10.2025	M3
10013	A	Close Circuit Breaker 52Q1		OK		Mlungisi Madela 529927 30.10.2025	M3
10014	A	Close Circuit Breaker 52Q2		OK		Mlungisi Madela 529927 30.10.2025	M3
10015	R	All saloon emergency lights (low intensity) are ON (on) all light modules (Left + Right)		OK		Mlungisi Madela 529927 30.10.2025	M3



Serial Tests Report
TS310 – M3 – VFT
RTR Vehicle Functional Static Testing Report

Document Reference
GIB0000008857
Version: A0

Emission date
10/11/2025

10016	I	END OF TEST		OK		Mlungisi Madela 529927 30.10.2025	M3
-------	---	-------------	--	----	--	---	----

Section 6 – PACIS System

6.1 Climatic Conditions and Test Means

- Environmental conditions:
- Tests means:
- Equipment:

6.2 Description of the tests, characteristics to be measured, observed

6.3 Instructions list

6.3.1 PACIS System

I - Information A - Action R - Result NE - Not Executed

N°	Type	Instruction	File	Result status	Result value	Operator	Vehicle
10001	I	PACIS System IO (SPP=054)		OK		Mlungisi Madela 529927 30.10.2025	M3
10002	I	Initial conditions		OK		Mlungisi Madela 529927 30.10.2025	M3
10003	I	110Vdc Normal line is connected and ON		OK		Mlungisi Madela 529927 30.10.2025	M3
10004	I	Circuit Breakers		OK		Mlungisi Madela 529927 30.10.2025	M3
10005	A	Close Circuit Breaker 54Q1		OK		Mlungisi Madela 529927 30.10.2025	M3
10006	A	Close Circuit Breaker 54Q2		OK		Mlungisi Madela 529927 30.10.2025	M3
10007	A	Close Circuit Breaker 54Q10		OK		Mlungisi Madela 529927 30.10.2025	M3
10008	A	Close Circuit Breaker 54Q11		OK		Mlungisi Madela 529927 30.10.2025	M3
10009	A	Close Circuit Breaker 55Q2		OK		Mlungisi Madela 529927 30.10.2025	M3
10010	A	Close Circuit Breaker 55Q3		OK		Mlungisi Madela 529927 30.10.2025	M3
10011	R	All 'Pacis System' circuit breakers are closed		OK		Mlungisi Madela 529927 30.10.2025	M3
10012	I	Power Supply of Router Switches		OK		Mlungisi Madela 529927 30.10.2025	M3
10013	I	Ethernet Switch CRS1		OK		Mlungisi Madela 529927 30.10.2025	M3
10014	R	CRS1 is ON		OK		Mlungisi Madela 529927 30.10.2025	M3
10015	I	Ethernet Switch CRS2		OK		Mlungisi Madela 529927 30.10.2025	M3
10016	R	CRS2 is ON		OK		Mlungisi Madela 529927 30.10.2025	M3

10017	I	DPAI-1		OK		Mlungisi Madela 529927 30.10.2025	M3
10018	R	DPAI-1 is ON		OK		Mlungisi Madela 529927 30.10.2025	M3
10019	I	DPAI-2		OK		Mlungisi Madela 529927 30.10.2025	M3
10020	R	DPAI-2 is ON		OK		Mlungisi Madela 529927 30.10.2025	M3
10021	I	Lateral Display 'LAT1'		OK		Mlungisi Madela 529927 30.10.2025	M3
10022	R	The PWR (power) LED is ON on the Lateral Display 'LAT1'		OK		Mlungisi Madela 529927 30.10.2025	M3
10023	I	Lateral Display 'LAT2'		OK		Mlungisi Madela 529927 30.10.2025	M3
10024	R	The PWR (power) LED is ON on the Lateral Display 'LAT2'		OK		Mlungisi Madela 529927 30.10.2025	M3
10025	I	Interior Display 'INT1'		OK		Mlungisi Madela 529927 30.10.2025	M3
10026	R	The PWR (power) LED is ON on the Interior Display 'INT1'		OK		Mlungisi Madela 529927 30.10.2025	M3
10027	I	Interior Display 'INT2'		OK		Mlungisi Madela 529927 30.10.2025	M3
10028	R	The PWR (power) LED is ON on the Interior Display 'INT2' is ON		OK		Mlungisi Madela 529927 30.10.2025	M3
10029	I	Impedance of Loudspeaker		OK		Mlungisi Madela 529927 30.10.2025	M3
10030	I	Saloon Speakers Commanded by DPAI-1		OK		Mlungisi Madela 529927 30.10.2025	M3
10031	A	Measure the impedance connector '54XP1_X4' between pins:z32(+) and z30 (-)		OK		Mlungisi Madela 529927 30.10.2025	M3
10032	R	ImpedanceResult Max : x <= 32.00 (Ohm)		OK	31.2	Mlungisi Madela 529927 30.10.2025	M3
10033	I	Saloon Speakers Commanded by DPAI-2		OK		Mlungisi Madela 529927 30.10.2025	M3
10034	A	Measure the impedance connector '54XP2_X4' between pins:z32(+) and z30 (-)		OK		Mlungisi Madela 529927 30.10.2025	M3



10035	R	ImpedanceResult Max : x <= 32.00 (Ohm)		OK	31	Mlungisi Madela 529927 30.10.2025	M3
10036	I	END OF TEST		OK		Mlungisi Madela 529927 30.10.2025	M3



Serial Tests Report
TS310 – M3 – VFT
RTR Vehicle Functional Static Testing Report

Document Reference
GIB0000008857
Version: A0

Emission date
10/11/2025

Section 7 – Train Ground Communication

7.1 Climatic Conditions and Test Means

- Environmental conditions:
- Tests means:
- Equipment:

7.2 Description of the tests, characteristics to be measured, observed

7.3 Instructions list

7.3.1 ERTMS

I - Information A - Action R - Result NE - Not Executed

N°	Type	Instruction	File	Result status	Result value	Operator	Vehicle
10001	I	ERTMS (SPP=062)		OK		Mlungisi Madela 529927 30.10.2025	M3
10002	A	ERTMS Bypass Train Lines Check continuity between END1 90XR14 pin 11 END2 90XP24 pin 11		OK		Mlungisi Madela 529927 30.10.2025	M3
10003	R	Both pins are continuous		OK		Mlungisi Madela 529927 30.10.2025	M3
10004	A	Emergency Brake ERTMS 1 Train Lines Check continuity between END1 90XR14 pin 18 END2 90XP24 pin 18		OK		Mlungisi Madela 529927 30.10.2025	M3
10005	R	Both pins are continuous		OK		Mlungisi Madela 529927 30.10.2025	M3
10006	I	Emergency Brake ERTMS 2 Train Lines Check continuity between END1 90XR14 pin 20 END2 90XP24 pin 20		OK		Mlungisi Madela 529927 30.10.2025	M3
10007	R	Both pins are continuous		OK		Mlungisi Madela 529927 30.10.2025	M3
10008	I	Eurobalise Antenna Cable		OK		Mlungisi Madela 529927 30.10.2025	M3
10009	A	Check continuity between [Intercar(LOCAL: +END1; Connector - 90XR10) and Intercar (LOCAL:+END2; connector -90XP20)] according to the image below		OK		Mlungisi Madela 529927 30.10.2025	M3
10010	R	Eurobalise Antenna cable is correctly configured		OK		Mlungisi Madela 529927 30.10.2025	M3
10011	I	END OF TEST		OK		Mlungisi Madela 529927 30.10.2025	M3

Section 8 – Rescue Mode and Emergency Disconnection

8.1 Climatic Conditions and Test Means

- Environmental conditions:
- Tests means:
- Equipment:

8.2 Description of the tests, characteristics to be measured, observed

8.3 Instructions list

8.3.1 Rescue Mode and Emergency Disconnection

I - Information A - Action R - Result NE - Not Executed

N°	Type	Instruction	File	Result status	Result value	Operator	Vehicle
10001	I	Rescue Mode and Emergency Disconnection (SPP=027)		OK		Mbavhalelo Funyufunyu 484649 30.10.2025	M3
10002	I	Backup Mode		OK		Mbavhalelo Funyufunyu 484649 30.10.2025	M3
10003	A	Backup Mode Train Lines Check continuity between END1 90XR15 pin 23 END2 90XP25 pin 23 and 27K1 A1		OK		Mbavhalelo Funyufunyu 484649 30.10.2025	M3
10004	R	All points are continuous		OK		Mbavhalelo Funyufunyu 484649 30.10.2025	M3
10005	A	Check continuity between 27K1 A2 and Ground		OK		Mbavhalelo Funyufunyu 484649 30.10.2025	M3
10006	R	The points are continuous		OK		Mbavhalelo Funyufunyu 484649 30.10.2025	M3
10007	I	Emergency Disconnection		OK		Mbavhalelo Funyufunyu 484649 30.10.2025	M3
10008	A	Emergency Disconnection Train Lines Check continuity between END1 90XR15 pin 24 END2 90XP25 pin 24		OK		Mbavhalelo Funyufunyu 484649 30.10.2025	M3
10009	R	All points are continuous		OK		Mbavhalelo Funyufunyu 484649 30.10.2025	M3
10010	I	END OF TEST		OK		Mbavhalelo Funyufunyu 484649 30.10.2025	M3

Section 9 – Emergency Brake

9.1 Climatic Conditions and Test Means

 
- Environmental conditions:
- Tests means:
- Equipment:

9.2 Description of the tests, characteristics to be measured, observed

9.3 Instructions list

9.3.1 Emergency Brake

I - Information A - Action R - Result NE - Not Executed

N°	Type	Instruction	File	Result status	Result value	Operator	Vehicle
10001	I	Emergency Brake (SPP=044)		OK		Mbavhalelo Funyufunyu 484649 30.10.2025	M3
10002	I	Initial Conditions		OK		Mbavhalelo Funyufunyu 484649 30.10.2025	M3
10003	I	No PEAs are activated		OK		Mbavhalelo Funyufunyu 484649 30.10.2025	M3
10004	I	110Vdc Normal power supply should be connected to the vehicle and ON		OK		Mbavhalelo Funyufunyu 484649 30.10.2025	M3
10005	I	Visual Inspection		OK		Mbavhalelo Funyufunyu 484649 30.10.2025	M3
10006	A	Physically and visually inspect all the Disk Break Units (DBU) and brake pads, to ensure they are securely fitted		OK		Mbavhalelo Funyufunyu 484649 30.10.2025	M3
10007	R	All the brake DBUs are correctly installed and all the brake pads are correctly installed and locked		OK		Mbavhalelo Funyufunyu 484649 30.10.2025	M3
10008	A	Check the pipe installation		OK		Mbavhalelo Funyufunyu 484649 30.10.2025	M3
10009	R	All the pipes are installed on the vehicle		OK		Mbavhalelo Funyufunyu 484649 30.10.2025	M3
10010	A	Check all the Passenger Emergency Alarm handles, and ensure they are connected to their respective connectors		OK		Mbavhalelo Funyufunyu 484649 30.10.2025	M3
10011	R	All the PEAs are installed and connected		OK		Mbavhalelo Funyufunyu 484649 30.10.2025	M3
10012	I	Train Lines		OK		Mbavhalelo Funyufunyu 484649 30.10.2025	M3

10013	A	Emergency Brake Loop Train Lines Check continuity between END1 90XR24 pin 8 END2 90XP34 pin 8	OK		Mbavhalelo Funyufunyu 484649 30.10.2025	M3
10014	R	Both points are continuous	OK		Mbavhalelo Funyufunyu 484649 30.10.2025	M3
10015	A	Emergency Brake Loop Override Train Lines Check continuity between END1 90XR24 pin 9 END2 90XP34 pin 9	OK		Mbavhalelo Funyufunyu 484649 30.10.2025	M3
10016	R	Both points are continuous	OK		Mbavhalelo Funyufunyu 484649 30.10.2025	M3
10017	I	Emergency Brake Train Line Check continuity between END1 90XR25 pin 67 END2 90XP35 pin 67	OK		Mbavhalelo Funyufunyu 484649 30.10.2025	M3
10018	R	Both points are continuous	OK		Mbavhalelo Funyufunyu 484649 30.10.2025	M3
10019	A	PEA Loop OTDR Train Lines Check continuity between END1 90XR24 pin 10 END2 90XP34 pin 10	OK		Mbavhalelo Funyufunyu 484649 30.10.2025	M3
10020	R	Both points are continuous	OK		Mbavhalelo Funyufunyu 484649 30.10.2025	M3
10021	A	PEA Loop Train Lines Check continuity between END1 90XR25 pin 95 END2 90XP35 pin95	OK		Mbavhalelo Funyufunyu 484649 30.10.2025	M3
10022	R	Both points are continuous	OK		Mbavhalelo Funyufunyu 484649 30.10.2025	M3
10023	A	PEA Reset Check continuity on Timer Relay 44D1 between points A1 and B1. Check continuity on Timer Relay 44D1 between points A4, B3 and C4	OK		Mbavhalelo Funyufunyu 484649 30.10.2025	M3
10024	R	The Points are continuous.	OK		Mbavhalelo Funyufunyu 484649 30.10.2025	M3



Serial Tests Report
TS310 – M3 – VFT
RTR Vehicle Functional Static Testing Report

Document Reference
GIB0000008857
Version: A0

Emission date
10/11/2025

10025	I	END OF TEST		OK		Mbavhalelo Funyufunyu 484649 30.10.2025	M3
-------	---	-------------	--	----	--	--	----



Serial Tests Report
TS310 – M3 – VFT
RTR Vehicle Functional Static Testing Report

Document Reference
GIB0000008857
Version: A0

Emission date
10/11/2025

Section 10 – Service Brake

10.1 Climatic Conditions and Test Means

- Environmental conditions:
- Tests means:
- Equipment:

10.2 Description of the tests, characteristics to be measured, observed

10.3 Instructions list

10.3.1 Service Brake

I - Information A - Action R - Result NE - Not Executed

N°	Type	Instruction	File	Result status	Result value	Operator	Vehicle
10001	I	Service Brake (SPP=040)		OK		Mlungisi Madela 529927 30.10.2025	M3
10002	I	Initial Conditions		OK		Mlungisi Madela 529927 30.10.2025	M3
10003	I	No air supply to the vehicle		OK		Mlungisi Madela 529927 30.10.2025	M3
10004	I	All brake panel cocks are in normal position (not isolated)		OK		Mlungisi Madela 529927 30.10.2025	M3
10005	I	110Vdc Normal power supply should be connected to the vehicle and ON		OK		Mlungisi Madela 529927 30.10.2025	M3
10006	I	Follow the procedure in the document below to upload software onto the TBCU electronic [14-57-29-277666_277616_TBCU Software Upload.pdf]		OK		Mlungisi Madela 529927 30.10.2025	M3
10007	I	Power Supply		OK		Mlungisi Madela 529927 30.10.2025	M3
10008	A	Remove the connector 10XR12_XCB2 from the propulsion box		OK		Mlungisi Madela 529927 30.10.2025	M3
10009	A	Close Circuit Breaker 33Q1, 33Q3 and 33Q5		OK		Mlungisi Madela 529927 30.10.2025	M3
10010	A	Check the voltage on connector 10XR12_XCB2 between pins 4 (+) and 69 (-) ; 4(+) and 67(-); and 5(+) and 68(-)		OK		Mlungisi Madela 529927 30.10.2025	M3
10011	R	Battery Voltage (above 80Vdc) is measured on connector 10XR12_XCB2 between pins 4 (+) and 69 (-) ; 4(+) and 67(-); and 5(+) and 68(-)		OK		Mlungisi Madela 529927 30.10.2025	M3
10012	A	Open Circuit Breaker 33Q1 and 33Q3, Replace connector 10XR12_XCB2 on the propulsion box, and Close Circuit breaker 33Q1 and 33Q3		OK		Mlungisi Madela 529927 30.10.2025	M3
10013	A	Remove the connector -40XP2_C2_16 from pneumatic brake panel		OK		Mlungisi Madela 529927 30.10.2025	M3
10014	A	Close Circuit Breaker 40Q1		OK		Mlungisi Madela 529927 30.10.2025	M3

10015	A	Check the voltage on connector 40XP2_C2_16 between pins 13 (+) and 31 (-)		OK		Mlungisi Madela 529927 30.10.2025	M3
10016	R	Battery Voltage (above 80Vdc) is measured on connector 40XP2_C2_16 between pins 13 (+) and 31 (-)		OK		Mlungisi Madela 529927 30.10.2025	M3
10017	A	Open Circuit Breaker 40Q1, Replace connector -40XP2_C2_16 on the pneumatic brake panel, and Close Circuit breaker -40Q1		OK		Mlungisi Madela 529927 30.10.2025	M3
10018	R	The pneumatic brake panel 40A2 is ON		OK		Mlungisi Madela 529927 30.10.2025	M3
10019	I	Train Lines		OK		Mlungisi Madela 529927 30.10.2025	M3
10020	A	EB Reduced Train Lines Check continuity between END1 90XR15 pin 60 END2 90XP25 pin 60		OK		Mlungisi Madela 529927 30.10.2025	M3
10021	R	Both points are continuous		OK		Mlungisi Madela 529927 30.10.2025	M3
10022	A	Brake Applied Train Lines Check continuity between END1 90XR15 pin 50 END2 90XP25 pin 50		OK		Mlungisi Madela 529927 30.10.2025	M3
10023	R	Both points are continuous		OK		Mlungisi Madela 529927 30.10.2025	M3
10024	A	Remote Isolation Train Lines Check continuity between END1 90XR15 pin 59 END2 90XP25 pin 59		OK		Mlungisi Madela 529927 30.10.2025	M3
10025	R	Both points are continuous		OK		Mlungisi Madela 529927 30.10.2025	M3
10026	I	END OF TEST		OK		Mlungisi Madela 529927 30.10.2025	M3



Serial Tests Report TS310 – M3 – VFT RTR Vehicle Functional Static Testing Report	Document Reference GIB0000008857 Version: A0	Emission date 10/11/2025
---	--	-----------------------------

Section 11 – Holding and Parking Brake

11.1 Climatic Conditions and Test Means

- Environmental conditions:
- Tests means:
- Equipment:

11.2 Description of the tests, characteristics to be measured, observed

11.3 Instructions list

11.3.1 Holding and Parking Brake

I - Information A - Action R - Result NE - Not Executed

N°	Type	Instruction	File	Result status	Result value	Operator	Vehicle
10001	I	Holding and Parking Brake (SPP_045)		OK		Mlungisi Madela 529927 30.10.2025	M3
10002	I	Initial Conditions		OK		Mlungisi Madela 529927 30.10.2025	M3
10003	A	Using the tools list on the side of your screen, record the serial number of the manometer that will be used during this test		OK		Mlungisi Madela 529927 30.10.2025	M3
10004	A	Check that the pressure on Test point C2.11/1 is >5bar		OK		Mlungisi Madela 529927 30.10.2025	M3
10005	I	Visual Inspection		OK		Mlungisi Madela 529927 30.10.2025	M3
10006	A	Check the installation of the manual parking brake release components (lever + cable)		OK		Mlungisi Madela 529927 30.10.2025	M3
10007	R	The lever is securely fixed (tight) and the cable is correctly attached to the bogie (there is no excess cable and all clamps are installed)		OK		Mlungisi Madela 529927 30.10.2025	M3
10008	I	Circuit Breaker		OK		Mlungisi Madela 529927 30.10.2025	M3
10009	A	Close Circuit Breaker 33Q3		OK		Mlungisi Madela 529927 30.10.2025	M3
10010	A	Close Circuit Breaker 33Q5		OK		Mlungisi Madela 529927 30.10.2025	M3
10011	I	Parking Brake Pressure Switch		OK		Mlungisi Madela 529927 30.10.2025	M3
10012	R	Read Defined Variable [TT] (TBCU3)LI_PARK_BR_RELEASE = 1.0		OK	1	Mlungisi Madela 529927 30.10.2025	M3
10013	R	Read Defined Variable [TT] (TBCU3)LI_BRAKE_STAT = 0.0		OK	0	Mlungisi Madela 529927 30.10.2025	M3
10014	R	Read Defined Variable [TT] (MPU1)tbcu3_parkbrakerelease = 1.0		OK	1	Mlungisi Madela 529927 30.10.2025	M3
10015	R	Read Defined Variable [TT] (MPU1)tbcu3_li_pbrake_stat = 0.0		OK	0	Mlungisi Madela 529927 30.10.2025	M3

10016	A	Parking Brake Applied Train Lines Check continuity between END1 90XR15 pin 77 END2 90XP25 pin 77	OK		Mlungisi Madela 529927 30.10.2025	M3
10017	R	Both points are continuous	OK		Mlungisi Madela 529927 30.10.2025	M3
10018	A	Remote Parking Command Train Lines Check continuity between END1 90XR15 pin 68 END2 90XP25 pin 68	OK		Mlungisi Madela 529927 30.10.2025	M3
10019	R	Both points are continuous	OK		Mlungisi Madela 529927 30.10.2025	M3
10020	I	Parking Brake Applied	OK		Mlungisi Madela 529927 30.10.2025	M3
10021	I	For this section of the test, ensure that the pressure on test point C2.11/1 is ALWAYS BELOW 4.8 Bar. if it goes above, turn the Isolation cock C2.3.2 to CLOSE position to drain the air	OK		Mlungisi Madela 529927 30.10.2025	M3
10022	A	Position the Isolation cock C2.3.2 in CLOSE position. Allow the parking brake air pressure to drain to below 4.5 Bar. Use the test point C2.11/1 to verify the air pressure <4.5 Bar	OK		Mlungisi Madela 529927 30.10.2025	M3
10023	R	Pressure at test point C2.11/1 <4.5 Bar	OK		Mlungisi Madela 529927 30.10.2025	M3
10024	R	Read Defined Variable [TT] (TBCU3)LI_PARK_BR_RELEASE = 0.0	OK	0	Mlungisi Madela 529927 30.10.2025	M3
10025	R	Read Defined Variable [TT] (MPU1)tbcu3_parkbrakerelease = 0.0	OK	0	Mlungisi Madela 529927 30.10.2025	M3
10026	A	Return the Isolation cock C2.3.2 to OPEN position	OK		Mlungisi Madela 529927 30.10.2025	M3
10027	R	Read Defined Variable [TT] (TBCU3)LI_BRAKE_STAT = 1.0	OK	1	Mlungisi Madela 529927 30.10.2025	M3
10028	R	Read Defined Variable [TT] (MPU1)tbcu3_li_pbrake_stat = 1.0	OK	1	Mlungisi Madela 529927 30.10.2025	M3
10029	R	Read Defined Variable [TT] (TBCU3)LI_PARK_BR_DC = 0.0	OK	0	Mlungisi Madela 529927 30.10.2025	M3
10030	R	Read Defined Variable [TT] (MPU1)tbcu3_parkbrakeisoldc = 0.0	OK	0	Mlungisi Madela 529927 30.10.2025	M3
10031	R	Read Defined Variable [TT] (MPU1)li_pbk_m3parkbrakeisol = 0.0	OK	0	Mlungisi Madela 529927 30.10.2025	M3

10032	A	Position the Isolation cock C2.3.2 in CLOSE position		OK		Mlungisi Madela 529927 30.10.2025	M3
10033	R	Read Defined Variable [TT] (MPU1)li_pbk_m3parkbrakeisol = 1.0		OK	1	Mlungisi Madela 529927 30.10.2025	M3
10034	R	Read Defined Variable [TT] (TBCU3)LI_BRAKE_STAT = 0.0		OK	0	Mlungisi Madela 529927 30.10.2025	M3
10035	R	Read Defined Variable [TT] (MPU1)tbcu3_li_pbrake_stat = 0.0		OK	0	Mlungisi Madela 529927 30.10.2025	M3
10036	R	Read Defined Variable [TT] (TBCU3)LI_PARK_BR_DC = 1.0		OK	1	Mlungisi Madela 529927 30.10.2025	M3
10037	R	Read Defined Variable [TT] (MPU1)tbcu3_parkbrakeisoldc = 1.0		OK	1	Mlungisi Madela 529927 30.10.2025	M3
10038	A	Return the Isolation cock C2.3.2 to OPEN position		OK		Mlungisi Madela 529927 30.10.2025	M3
10039	I	END OF TEST		OK		Mlungisi Madela 529927 30.10.2025	M3



Serial Tests Report
TS310 – M3 – VFT
RTR Vehicle Functional Static Testing Report

Document Reference
GIB0000008857
Version: A0

Emission date
10/11/2025

Section 12 – Passenger Doors

12.1 Climatic Conditions and Test Means

- Environmental conditions:
- Tests means:
- Equipment:

12.2 Description of the tests, characteristics to be measured, observed

12.3 Instructions list

12.3.1 Passenger Doors

I - Information A - Action R - Result NE - Not Executed

N°	Type	Instruction	File	Result status	Result value	Operator	Vehicle
10001	I	Passenger Doors (SPP=050)		OK		Mlungisi Madela 529927 30.10.2025	M3
10002	I	Initial conditions		OK		Mlungisi Madela 529927 30.10.2025	M3
10003	I	110Vdc Normal power supply is connected to the vehicle and ON		OK		Mlungisi Madela 529927 30.10.2025	M3
10004	I	Circuit Breaker		OK		Mlungisi Madela 529927 30.10.2025	M3
10005	A	Close Circuit Breaker 50Q1		OK		Mlungisi Madela 529927 30.10.2025	M3
10006	R	DCU 1 is powered ON		OK		Mlungisi Madela 529927 30.10.2025	M3
10007	R	Check on the DDU that DCU1 is online		OK		Mlungisi Madela 529927 30.10.2025	M3
10008	A	Close Circuit Breaker 50Q2		OK		Mlungisi Madela 529927 30.10.2025	M3
10009	R	DCU 2 is powered ON		OK		Mlungisi Madela 529927 30.10.2025	M3
10010	R	Check on the DDU that DCU2 is online		OK		Mlungisi Madela 529927 30.10.2025	M3
10011	A	Close Circuit Breaker 50Q3		OK		Mlungisi Madela 529927 30.10.2025	M3
10012	R	DCU 3 is powered ON		OK		Mlungisi Madela 529927 30.10.2025	M3
10013	R	Check on the DDU that DCU3 is online		OK		Mlungisi Madela 529927 30.10.2025	M3
10014	A	Close Circuit Breaker 50Q4		OK		Mlungisi Madela 529927 30.10.2025	M3
10015	R	DCU 4 is powered ON		OK		Mlungisi Madela 529927 30.10.2025	M3
10016	R	Check on the DDU that DCU4 is online		OK		Mlungisi Madela 529927 30.10.2025	M3

10017	A	Close Circuit Breaker 50Q5		OK		Mlungisi Madela 529927 30.10.2025	M3
10018	R	DCU 5 is powered ON		OK		Mlungisi Madela 529927 30.10.2025	M3
10019	R	Check on the DDU that DCU5 is online		OK		Mlungisi Madela 529927 30.10.2025	M3
10020	A	Close Circuit Breaker 50Q6		OK		Mlungisi Madela 529927 30.10.2025	M3
10021	R	DCU 6 is powered ON		OK		Mlungisi Madela 529927 30.10.2025	M3
10022	R	Check on the DDU that DCU6 is online		OK		Mlungisi Madela 529927 30.10.2025	M3
10023	A	Close Circuit Breaker 50Q7		OK		Mlungisi Madela 529927 30.10.2025	M3
10024	I	Car ID Code		OK		Mlungisi Madela 529927 30.10.2025	M3
10025	A	Using the DDU on the test bench, check that all the doors on M4 are available - as in the picture below		OK		Mlungisi Madela 529927 30.10.2025	M3
10026	R	All doors are available		OK		Mlungisi Madela 529927 30.10.2025	M3
10027	I	Train Lines and Safety Loop		OK		Mlungisi Madela 529927 30.10.2025	M3
10028	A	ERTMS Auth Left Train Lines Check continuity between END1 90XR15 pin 44 END2 90XP25 pin 44		OK		Mlungisi Madela 529927 30.10.2025	M3
10029	R	Both points are continuous		OK		Mlungisi Madela 529927 30.10.2025	M3
10030	A	ERTMS Auth Right Train Lines Check continuity between END1 90XR15 pin 47 END2 90XP25 pin 47		OK		Mlungisi Madela 529927 30.10.2025	M3
10031	R	Both points are continuous		OK		Mlungisi Madela 529927 30.10.2025	M3
10032	A	Doors Open Train Lines Check continuity between END1 90XR15 pin 66 END2 90XP25 pin 66		OK		Mlungisi Madela 529927 30.10.2025	M3
10033	R	Both points are continuous		OK		Mlungisi Madela 529927 30.10.2025	M3

10034	A	Door Close Right Train Lines Check continuity between END1 90XR15 pin 78 END2 90XP25 pin 78	OK	Mlungisi Madela 529927 30.10.2025	M3
10035	A	Both points are continuous	OK	Mlungisi Madela 529927 30.10.2025	M3
10036	A	Door Close Left Train Lines Check continuity between END1 90XR15 pin 79 END2 90XP25 pin 79	OK	Mlungisi Madela 529927 30.10.2025	M3
10037	R	Both points are continuous	OK	Mlungisi Madela 529927 30.10.2025	M3
10038	A	Door Auth Left Train Lines Check continuity between END1 90XR15 pin 85 END2 90XP25 pin 85	OK	Mlungisi Madela 529927 30.10.2025	M3
10039	R	Both points are continuous	OK	Mlungisi Madela 529927 30.10.2025	M3
10040	A	Door Auth Right Train Lines Check continuity between END1 90XR15 pin 84 END2 90XP25 pin 84	OK	Mlungisi Madela 529927 30.10.2025	M3
10041	R	Both points are continuous	OK	Mlungisi Madela 529927 30.10.2025	M3
10042	A	V<3km/h Train Lines Check continuity between END1 90XR15 pin 29 END2 90XP25 pin 29	OK	Mlungisi Madela 529927 30.10.2025	M3
10043	R	Both points are continuous	OK	Mlungisi Madela 529927 30.10.2025	M3
10044	A	Door Auth Left Train Lines Check continuity between END1 90XR15 pin 85 END2 90XP25 pin 85	OK	Mlungisi Madela 529927 30.10.2025	M3
10045	R	Both points are continuous	OK	Mlungisi Madela 529927 30.10.2025	M3
10046	A	Door Auth Right Train Lines Check continuity between END1 90XR15 pin 84 END2 90XP25 pin 84	OK	Mlungisi Madela 529927 30.10.2025	M3
10047	R	Both points are continuous	OK	Mlungisi Madela 529927 30.10.2025	M3

10048	A	Safety Doors Loop Train Lines Check continuity between END1 90XR15 pin 96 END2 90XP25 pin 96	OK		Mlungisi Madela 529927 30.10.2025	M3
10049	R	Both points are continuous	OK		Mlungisi Madela 529927 30.10.2025	M3
10050	I	Left Side Doors	OK		Mlungisi Madela 529927 30.10.2025	M3
10051	A	Put the connector written M3 on connector 90XP15 End 2	OK		Mlungisi Madela 529927 30.10.2025	M3
10052	I	Door 1	OK		Mlungisi Madela 529927 30.10.2025	M3
10053	I	The below signals are now simulated: - Door Auth Left - Door Open Left - V<3km/h	OK		Mlungisi Madela 529927 30.10.2025	M3
10054	A	Force [TT] (MPU1)lo_dor_m3opendoorleft = 1.00	OK		Mlungisi Madela 529927 30.10.2025	M3
10055	R	Check that the door opens in 3 sec (+1/-0)	OK		Mlungisi Madela 529927 30.10.2025	M3
10056	R	Check that the GREEN LED on both sides of the door blink while the door opens [Safety Request: Prasa8-05]	OK		Mlungisi Madela 529927 30.10.2025	M3
10057	I	Door Opening Gap	OK		Mlungisi Madela 529927 30.10.2025	M3
10058	A	Measure the opening gap of the door. (This measurement must be done at the BOTTOM of the door)	OK		Mlungisi Madela 529927 30.10.2025	M3
10059	R	Door 1 gapResult Min/Max : 1390<= x <= 1410 (mm)	OK	1403	Mlungisi Madela 529927 30.10.2025	M3
10060	A	Measure the opening gap of the door. (This measurement must be done at the top of the door)	OK		Mlungisi Madela 529927 30.10.2025	M3
10061	R	Door 1 gapResult Min/Max : 1390<= x <= 1410 (mm)	OK	1407	Mlungisi Madela 529927 30.10.2025	M3
10062	A	Measure the opening gap of the door. (This measurement must be done in the middle of the door)	OK		Mlungisi Madela 529927 30.10.2025	M3
10063	R	Door 1 gapResult Min/Max : 1390<= x <= 1410 (mm)	OK	1400	Mlungisi Madela 529927 30.10.2025	M3
10064	I	Door 3	OK		Mlungisi Madela 529927 30.10.2025	M3

10065	A	Measure the opening gap of the door. (This measurement must be done at the BOTTOM of the door)		OK		Mlungisi Madela 529927 30.10.2025	M3
10066	R	Door 3 gapResult Min/Max : 1390<= x <= 1410 (mm)		OK	1405	Mlungisi Madela 529927 30.10.2025	M3
10067	A	Measure the opening gap of the door. (This measurement must be done at the top of the door)		OK		Mlungisi Madela 529927 30.10.2025	M3
10068	R	Door 3 gapResult Min/Max : 1390<= x <= 1410 (mm)		OK	1404	Mlungisi Madela 529927 30.10.2025	M3
10069	A	Measure the opening gap of the door. (This measurement must be done in the middle of the door)		OK		Mlungisi Madela 529927 30.10.2025	M3
10070	R	Door 3 gapResult Min/Max : 1390<= x <= 1410 (mm)		OK	1408	Mlungisi Madela 529927 30.10.2025	M3
10071	I	Door 5		OK		Mlungisi Madela 529927 30.10.2025	M3
10072	I	Door Opening Gap		OK		Mlungisi Madela 529927 30.10.2025	M3
10073	A	Measure the opening gap of the door. (This measurement must be done at the BOTTOM of the door)		OK		Mlungisi Madela 529927 30.10.2025	M3
10074	R	Door 5 gapResult Min/Max : 1390<= x <= 1410 (mm)		OK	1402	Mlungisi Madela 529927 30.10.2025	M3
10075	A	Measure the opening gap of the door. (This measurement must be done at the top of the door)		OK		Mlungisi Madela 529927 30.10.2025	M3
10076	R	Door 5 gapResult Min/Max : 1390<= x <= 1410 (mm)		OK	1408	Mlungisi Madela 529927 30.10.2025	M3
10077	A	Measure the opening gap of the door. (This measurement must be done in the middle of the door)		OK		Mlungisi Madela 529927 30.10.2025	M3
10078	R	Door 5 gapResult Min/Max : 1390<= x <= 1410 (mm)		OK	1403	Mlungisi Madela 529927 30.10.2025	M3
10079	I	Right Side Doors		OK		Mlungisi Madela 529927 30.10.2025	M3
10080	I	Keep the connector on 90XP15 End 2		OK		Mlungisi Madela 529927 30.10.2025	M3
10081	I	Door 2		OK		Mlungisi Madela 529927 30.10.2025	M3
10082	I	The below signals remain simulated: - Door Auth Right - Door Open Right - V<3km/h		OK		Mlungisi Madela 529927 30.10.2025	M3

10083	A	Force [TT] (MPU1)lo_dor_m3opendoorright = 1.00		OK		Mlungisi Madela 529927 30.10.2025	M3
10084	R	Check that the door opens in 3 sec (+1/-0)		OK		Mlungisi Madela 529927 30.10.2025	M3
10085	R	Check that the GREEN LED on both sides of the door blink while the door opens. [Safety Request: Prasa8-05]		OK		Mlungisi Madela 529927 30.10.2025	M3
10086	I	Door Opening Gap		OK		Mlungisi Madela 529927 30.10.2025	M3
10087	A	Measure the opening gap of the door. (This measurement must be done at the BOTTOM of the door).		OK		Mlungisi Madela 529927 30.10.2025	M3
10088	R	Door 2 gapResult Min/Max : 1390<= x <= 1410 (mm)		OK	1405	Mlungisi Madela 529927 30.10.2025	M3
10089	A	Measure the opening gap of the door. (This measurement must be done at the top of the door)		OK		Mlungisi Madela 529927 30.10.2025	M3
10090	R	Door 2 gapResult Min/Max : 1390<= x <= 1410 (mm)		OK	1410	Mlungisi Madela 529927 30.10.2025	M3
10091	A	Measure the opening gap of the door. (This measurement must be done in the middle of the door)		OK		Mlungisi Madela 529927 30.10.2025	M3
10092	R	Door 2 gapResult Min/Max : 1390<= x <= 1410 (mm)		OK	1408	Mlungisi Madela 529927 30.10.2025	M3
10093	I	Door 4		OK		Mlungisi Madela 529927 30.10.2025	M3
10094	I	Door Opening Gap		OK		Mlungisi Madela 529927 30.10.2025	M3
10095	A	Measure the opening gap of the door. (This measurement must be done at the BOTTOM of the door)		OK		Mlungisi Madela 529927 30.10.2025	M3
10096	R	Door 4 gapResult Min/Max : 1390<= x <= 1410 (mm)		OK	1407	Mlungisi Madela 529927 30.10.2025	M3
10097	A	Measure the opening gap of the door. (This measurement must be done at the top of the door)		OK		Mlungisi Madela 529927 30.10.2025	M3
10098	R	Door 4 gapResult Min/Max : 1390<= x <= 1410 (mm)		OK	1409	Mlungisi Madela 529927 30.10.2025	M3
10099	A	Measure the opening gap of the door. (This measurement must be done in the middle of the door)		OK		Mlungisi Madela 529927 30.10.2025	M3
10100	R	Door 4 gapResult Min/Max : 1390<= x <= 1410 (mm)		OK	1408	Mlungisi Madela 529927 30.10.2025	M3

10101	I	Door 6		OK		Mlungisi Madela 529927 30.10.2025	M3
10102	I	Door Opening Gap		OK		Mlungisi Madela 529927 30.10.2025	M3
10103	A	Measure the opening gap of the door. (This measurement must be done at the BOTTOM of the door)		OK		Mlungisi Madela 529927 30.10.2025	M3
10104	R	Door 6 gapResult Min/Max : 1390<= x <= 1410 (mm)		OK	1405	Mlungisi Madela 529927 30.10.2025	M3
10105	A	Measure the opening gap of the door. (This measurement must be done at the top of the door)		OK		Mlungisi Madela 529927 30.10.2025	M3
10106	R	Door 6 gapResult Min/Max : 1390<= x <= 1410 (mm)		OK	1409	Mlungisi Madela 529927 30.10.2025	M3
10107	A	Measure the opening gap of the door. (This measurement must be done in the middle of the door)		OK		Mlungisi Madela 529927 30.10.2025	M3
10108	R	Door 6 gapResult Min/Max : 1390<= x <= 1410 (mm)		OK	1402	Mlungisi Madela 529927 30.10.2025	M3
10109	I	Obstacle Detection		OK		Mlungisi Madela 529927 30.10.2025	M3
10110	A	Position an obstacle on the floor in the centre of the door closing line for all the doors		OK		Mlungisi Madela 529927 30.10.2025	M3
10111	A	Force [TT] (MPU1)lo_dor_m3opendoorleft = 0		OK		Mlungisi Madela 529927 30.10.2025	M3
10112	A	Force [TT] (MPU1)lo_dor_m3opendoorright = 0		OK		Mlungisi Madela 529927 30.10.2025	M3
10113	R	The doors will hit the obstacle, reopen and try to close again 3 times. On the third attempt it will stop and stand ajar - free to be opened manually		OK		Mlungisi Madela 529927 30.10.2025	M3
10114	A	Safety Doors Loop Train Lines Check continuity between END1 90XR15 pin 96 END2 90XP25 pin 96		OK		Mlungisi Madela 529927 30.10.2025	M3
10115	R	There is no continuity between the two points		OK		Mlungisi Madela 529927 30.10.2025	M3
10116	A	Force [TT] (MPU1)lo_dor_m3opendoorleft = 1		OK		Mlungisi Madela 529927 30.10.2025	M3
10117	A	Force [TT] (MPU1)lo_dor_m3opendoorright = 1		OK		Mlungisi Madela 529927 30.10.2025	M3
10118	R	The door opens fully		OK		Mlungisi Madela 529927	M3

						30.10.2025	
10119	A	Remove the obstacle		OK		Mlungisi Madela 529927 30.10.2025	M3
10120	A	Release [TT] (MPU1)lo_dor_m3opendoorleft		OK		Mlungisi Madela 529927 30.10.2025	M3
10121	A	Release [TT] (MPU1)lo_dor_m3opendoorright		OK		Mlungisi Madela 529927 30.10.2025	M3
10122	A	Remove the connector from 90XP15 End 2.		OK		Mlungisi Madela 529927 30.10.2025	M3
10123	I	End of Test.		OK		Mlungisi Madela 529927 30.10.2025	M3



Serial Tests Report
TS310 – M3 – VFT
RTR Vehicle Functional Static Testing Report

Document Reference
GIB0000008857
Version: A0

Emission date
10/11/2025

Section 13 – HVAC Air Condition

13.1 Climatic Conditions and Test Means

- Environmental conditions:
- Tests means:
- Equipment:

13.2 Description of the tests, characteristics to be measured, observed

13.3 Instructions list

13.3.1 HVAC_TK

I - Information A - Action R - Result NE - Not Executed

N°	Type	Instruction	File	Result status	Result value	Operator	Vehicle
10001	I	Air Conditioning (SPP=057)		OK		Alleta Sekgololo 417407 31.10.2025	M3
10002	I	Initial conditions		OK		Alleta Sekgololo 417407 31.10.2025	M3
10003	A	Car Should be Prepared		OK		Alleta Sekgololo 417407 31.10.2025	M3
10004	I	Power Supply		OK		Alleta Sekgololo 417407 31.10.2025	M3
10005	A	Close Circuit Breaker 57Q1		OK		Alleta Sekgololo 417407 31.10.2025	M3
10006	A	Close Circuit Breaker 57Q2		OK		Alleta Sekgololo 417407 31.10.2025	M3
10007	I	HVAC Electronic Power Supply		OK		Alleta Sekgololo 417407 31.10.2025	M3
10008	A	Close Circuit Breaker F1 on the HVAC Panel		OK		Alleta Sekgololo 417407 31.10.2025	M3
10009	I	The HVAC electronic is ON		OK		Alleta Sekgololo 417407 31.10.2025	M3
10010	A	Turn the control switch to AUTO position on the HVAC Panel		OK		Alleta Sekgololo 417407 31.10.2025	M3
10011	I	Software Upload		OK		Alleta Sekgololo 417407 31.10.2025	M3
10012	I	Follow the procedure in the document below to upload software onto the HVAC electronic		OK		Alleta Sekgololo 417407 31.10.2025	M3
10013	A			OK		Alleta Sekgololo 417407 31.10.2025	M3
10014	I	Checking 400Vac		OK		Alleta Sekgololo 417407 31.10.2025	M3
10015	A	Ensure that the 400Vac Shore Supply is connected to the vehicle, else connect it		OK		Alleta Sekgololo 417407 31.10.2025	M3
10016	A	Disconnect connector 57XP4_X5 and use a multimeter to measure 400Vac between phases a1, a2 and b1		OK		Alleta Sekgololo 417407 31.10.2025	M3

10017	R	400Vac (+-5%) measured		OK		Alleta Sekgololo 417407 31.10.2025	M3
10018	A	On the same connector, with a phasemeter, check the correct Phase Rotation between points L1- Phase a1, L2- Phase a2 and L3- Phase b1.		OK		Alleta Sekgololo 417407 31.10.2025	M3
10019	R	The phase rotation is correct between all three phases		OK		Alleta Sekgololo 417407 31.10.2025	M3
10020	A	Normalize connector 57XP4_X5		OK		Alleta Sekgololo 417407 31.10.2025	M3
10021	I	HVAC 50% restriction		OK		Alleta Sekgololo 417407 31.10.2025	M3
10022	A	Force [TT] NRG_HvacM350Cmd = 0		OK		Alleta Sekgololo 417407 31.10.2025	M3
10023	I	HVAC inhib		OK		Alleta Sekgololo 417407 31.10.2025	M3
10024	A	Force [TT] (MPU1)lo_hva_m3hvacinhibr1__1 = 1		OK		Alleta Sekgololo 417407 31.10.2025	M3
10025	A	Force [TT] (MPU1)lo_hva_m3hvacinhibr2__1 = 1		OK		Alleta Sekgololo 417407 31.10.2025	M3
10026	R	HVAC unit turns ON and starts to work		OK		Alleta Sekgololo 417407 31.10.2025	M3
10027	I	Emergency Ventilation		OK		Alleta Sekgololo 417407 31.10.2025	M3
10028	A	Force [TT] (MPU1)lo_hva_m3emergventil__1 = 1		OK		Alleta Sekgololo 417407 31.10.2025	M3
10029	I	All saloon HVAC units work in Ventilation mode. Not heating/cooling		OK		Alleta Sekgololo 417407 31.10.2025	M3
10030	A	Connect the laptop to the HVAC maintenance software using HCU Finder and check the actual working mode of HVAC		OK		Alleta Sekgololo 417407 31.10.2025	M3
10031	R	Release [TT] (MPU1)lo_hva_m3emergventil__1		OK	UnableToRead	Ntobeko Ndllovu 421595 31.10.2025	M3
10032	I	Forced Mode (Saloon HVAC)		OK		Alleta Sekgololo 417407 31.10.2025	M3
10033	I	In the maintenance software, select the 'Forced' tab, and use the "Required working mode" drop down box to force the following modes:		OK		Alleta Sekgololo 417407 31.10.2025	M3

10034	I	For the next sections, walk through the whole car and physically check (feel) that the HVAC is functioning as desired		OK		Alleta Sekgololo 417407 31.10.2025	M3
10035	A	Force Ventilation mode on the Saloon HVAC		OK		Alleta Sekgololo 417407 31.10.2025	M3
10036	I	Ventilation Mode		OK		Alleta Sekgololo 417407 31.10.2025	M3
10037	R	All saloon HVAC units work in Ventilation mode. Not heating/cooling		OK		Alleta Sekgololo 417407 31.10.2025	M3
10038	I	Cooling Mode		OK		Alleta Sekgololo 417407 31.10.2025	M3
10039	A	Force Cooling mode on the Saloon HVAC		OK		Alleta Sekgololo 417407 31.10.2025	M3
10040	R	All saloon HVAC units work in Cooling mode		OK		Alleta Sekgololo 417407 31.10.2025	M3
10041	I	Heating Mode		OK		Alleta Sekgololo 417407 31.10.2025	M3
10042	A	Force Heating mode on the Saloon HVAC		OK		Alleta Sekgololo 417407 31.10.2025	M3
10043	R	All saloon HVAC units work in Heating mode		OK		Alleta Sekgololo 417407 31.10.2025	M3
10044	I	Self-Test		OK		Alleta Sekgololo 417407 31.10.2025	M3
10045	A	Force Self-Test on the Saloon HVAC		OK		Alleta Sekgololo 417407 31.10.2025	M3
10046	R	All saloon HVAC units work according to the mode described in the "Actual working mode"		OK		Alleta Sekgololo 417407 31.10.2025	M3
10047	R	The Exhaust fans are Turned OFF		OK		Alleta Sekgololo 417407 31.10.2025	M3
10048	I	HVAC Faults		OK		Alleta Sekgololo 417407 31.10.2025	M3
10049	A	In the maintenance software, select the "Alarms / Warnings" tab		OK		Alleta Sekgololo 417407 31.10.2025	M3
10050	A	Ensure there are no active faults on the HVAC		OK		Alleta Sekgololo 417407 31.10.2025	M3
10051	R	No active faults identified on the HVAC unit		OK		Alleta Sekgololo 417407 31.10.2025	M3

10052	A	Release [TT] (MPU1)lo_hva_m3hvacinhibr1__1		OK		Alleta Sekgololo 417407 31.10.2025	M3
10053	A	Release [TT] (MPU1)lo_hva_m3hvacinhibr2__1		OK		Alleta Sekgololo 417407 31.10.2025	M3
10054	A	Release [TT] NRG_HvacM350Cmd		OK		Alleta Sekgololo 417407 31.10.2025	M3
10055	I	End of Test		OK		Alleta Sekgololo 417407 31.10.2025	M3

13.3.2 HVAC_SME

I - Information A - Action R - Result NE - Not Executed

N°	Type	Instruction	File	Result status	Result value	Operator	Vehicle
10001	I	HVA_057 Air Conditioning		NE			M3
10002	I	Initial conditions		NE			M3
10003	A	Car Should be Prepared with CVS running and 400V ac available in the car		NE			M3
10004	I	HVAC AC Power Supply		NE			M3
10005	A	Close Circuit Breaker 13Q1 and 13Q5		NE			M3
10006	A	Check on the DDU if the HVAC is offline		NE			M3
10007	I	Checking 400Vac		NE			M3
10008	A	Close Circuit Breaker 57Q1		NE			M3
10009	A	Disconnect connector 57XP4_X5 and Measure 400Vac between all 3 phases which are a1- phase L1, a2- Phase L2 and b1- phase L3 of connector 57XP4_X5		NE			M3
10010	R	400Vac measured between all phases		NE			M3
10011	A	On same connector 57XP4_X5, with a phasemeter, check the correct Phase Rotation between points a1- Phase L1, a2- Phase L2 and b1- Phase L3.		NE			M3
10012	R	The phase rotation is correct between all three phases		NE			M3
10013	A	normalize connector 57XP4_X5		NE			M3
10014	I	HVAC Controller power supply		NE			M3
10015	A	Close Circuit Breaker 57Q2		NE			M3

10016	A	Allow the HVAC to initialize and check on the DDU if the HVAC is online		NE			M3
10017	R	HVAC unit is online and starts to work		NE			M3
10018	I	HVAC inhib		NE			M3
10019	A	Force [TT] (MPU1)lo_hva_m3hvacinhibr1__1 = 1		NE			M3
10020	A	Force [TT] (MPU1)lo_hva_m3hvacinhibr2__1 = 1		NE			M3
10021	I	HVAC 50% restriction		NE			M3
10022	A	Force [TT] NRG_HvacM350Cmd = 0		NE			M3
10023	I	Saloon HVAC		NE			M3
10024	I	HVAC web portal		NE			M3
10025	A	The attached document is a procedure on how to navigate around the maintenance software.		NE			M3
10026	I	Connect the laptop to the HVAC maintenance software using web browser. Enter the following IP address on the web browser 10.136.xxx.31 xxx represents the train number Login: maint Password: maint		NE			M3
10027	R	On status tab, Active mode is off for both cab and saloon		NE			M3
10028	A	Go to Alarms tab and clear all the alarms for saloon and cabin		NE			M3
10029	I	HAVC saloon		NE			M3
10030	I	Full "Self test" saloon		NE			M3
10031	I	For the following tests make sure on the webHMI tab you change controller to be controlled by webHMI and not MPU		NE			M3
10032	A	Before running the full test, please click on reset test to reset the previous results.		NE			M3

10033	A	Select Full-Test on the Saloon HVAC		NE			M3
10034	R	All saloon HVAC units work according to the mode described in the "ACTIVE MODE" on the status tab		NE			M3
10035	R	When the test is complete, please check if the status is showing as "TEST PASS" and the test took 3 mins +/- 2 seconds for each mode.		NE			M3
10036	I	Forced Mode (Saloon HVAC)		NE			M3
10037	I	During all tests Walk through the whole car and physically check (feel) that the HVAC is functioning as desired		NE			M3
10038	I	Go to maintenance tab to force the following modes		NE			M3
10039	I	Cooling Mode		NE			M3
10040	A	Select forced Cooling mode on the Saloon HVAC and let it run for 5 mins		NE			M3
10041	R	All HVAC units are cooling		NE			M3
10042	I	Heating Mode		NE			M3
10043	A	Select forced Heating mode on the Saloon HVAC and let it run for 5 mins		NE			M3
10044	R	All HVAC units are heating		NE			M3
10045	I	HVAC Faults		NE			M3
10046	A	In the maintenance software, select the "Alarms" tab		NE			M3
10047	A	Ensure there are no active faults on the HVAC for the Saloon. Use the highlighted drop down to navigate between saloon and cabin.		NE			M3
10048	R	No active faults identified on the HVAC unit		NE			M3
10049	A	Release [TT] (MPU1)lo_hva_m3hvacinhibr1__1		NE			M3

10050	A	Release [TT] (MPU1)lo_hva_m3hvacinhibr2__1		NE			M3
10051	A	Release [TT] NRG_HvacM350Cmd		NE			M3
10052	I	End of test		NE			M3



Serial Tests Report TS310 – M3 – VFT RTR Vehicle Functional Static Testing Report	Document Reference GIB0000008857 Version: A0	Emission date 10/11/2025
---	--	-----------------------------

Section 14 – Fire Protection

14.1 Climatic Conditions and Test Means

- Environmental conditions:
- Tests means:
- Equipment:

14.2 Description of the tests, characteristics to be measured, observed

14.3 Instructions list

14.3.1 Fire Protection

I - Information A - Action R - Result NE - Not Executed

N°	Type	Instruction	File	Result status	Result value	Operator	Vehicle
10001	I	Fire Protection System (SPP=067)		OK		Mbavhalelo Funyufunyu 484649 30.10.2025	M3
10002	I	Fire Detection Train Lines		OK		Mbavhalelo Funyufunyu 484649 30.10.2025	M3
10003	A	Fire Detection Train Lines Check continuity between END1 90XR14 pin 21 END2 90XP24 pin 21		OK		Mbavhalelo Funyufunyu 484649 30.10.2025	M3
10004	R	Both points are continuous		OK		Mbavhalelo Funyufunyu 484649 30.10.2025	M3
10005	I	Continuity Test		OK		Mbavhalelo Funyufunyu 484649 30.10.2025	M3
10006	I	The following steps are continuity tests between the two points described in each step. Use a multimeter for this test.		OK		Mbavhalelo Funyufunyu 484649 30.10.2025	M3
10007	A	From : [(local: +END1 -90XR13.B (pin 4))] to: [-Inter-connector (local: +END2 - 90XP23.b pin 4)]		OK		Mbavhalelo Funyufunyu 484649 30.10.2025	M3
10008	A	From : [(local: +END1 -90XR13.B (pin 5))] to: [-Inter-connector (local: +END2 - 90XP23.b pin 5)]		OK		Mbavhalelo Funyufunyu 484649 30.10.2025	M3
10009	A	From : [(local: +END1 -90XR13.A (pin 7))] to: [-Inter-connector (local: +END2 - 90XP23.a pin 7)]		OK		Mbavhalelo Funyufunyu 484649 30.10.2025	M3
10010	A	From : [(local: +END1 -90XR13.A (pin 8))] to: [-Inter-connector (local: +END2 - 90XP23.a pin 8)]		OK		Mbavhalelo Funyufunyu 484649 30.10.2025	M3
10011	I	END OF TEST		OK		Mbavhalelo Funyufunyu 484649 30.10.2025	M3

Section 15 – Traction and Electric Brake

15.1 Climatic Conditions and Test Means

- Environmental conditions:
- Tests means:
- Equipment:

15.2 Description of the tests, characteristics to be measured, observed

15.3 Instructions list

15.3.1 Traction and Electric Brake

I - Information A - Action R - Result NE - Not Executed

N°	Type	Instruction	File	Result status	Result value	Operator	Vehicle
10001	I	Traction and Electric Brake (SPP=033)		OK		Mlungisi Madela 529927 30.10.2025	M3
10002	I	Circuit Breakers and Configuration		OK		Mlungisi Madela 529927 30.10.2025	M3
10003	A	Close Circuit Breaker 33Q2		OK		Mlungisi Madela 529927 30.10.2025	M3
10004	A	Close Circuit Breaker 33Q4		OK		Mlungisi Madela 529927 30.10.2025	M3
10005	A	Close Circuit Breaker 33Q5		OK		Mlungisi Madela 529927 30.10.2025	M3
10006	I	Circuit Breaker 33Q1 and 33Q3 must be Opened		OK		Mlungisi Madela 529927 30.10.2025	M3
10007	A	110Vdc Normal Traction EL Train Line Put the connector written M3 on 90XP15 End2		OK		Mlungisi Madela 529927 30.10.2025	M3
10008	A	Close Circuit Breaker 33Q1		OK		Mlungisi Madela 529927 30.10.2025	M3
10009	A	Close Circuit Breaker 33Q3		OK		Mlungisi Madela 529927 30.10.2025	M3
10010	R	Read Defined Variable [TT] (TBCU3)LI_CAR_ID3 = 1.00		OK	1	Mlungisi Madela 529927 30.10.2025	M3
10011	I	The TBCU should appear on TCMS network on DDU screen		OK		Mlungisi Madela 529927 30.10.2025	M3
10012	I	Train Lines		OK		Mlungisi Madela 529927 30.10.2025	M3
10013	A	Forward Train Lines Check continuity between END1 90XR15 pin 25 END2 90XP25 pin 25		OK		Mlungisi Madela 529927 30.10.2025	M3
10014	R	Both points are continuous		OK		Mlungisi Madela 529927 30.10.2025	M3
10015	A	Reverse Train Lines Check continuity between		OK		Mlungisi Madela 529927 30.10.2025	M3

		END1 90XR15 pin 30 END2 90XP25 pin 30					
10016	R	Both points are continuous		OK		Mlungisi Madela 529927 30.10.2025	M3
10017	A	Traction Train Lines Check continuity between END1 90XR15 pin 31 END2 90XP25 pin 31		OK		Mlungisi Madela 529927 30.10.2025	M3
10018	R	Both points are continuous		OK		Mlungisi Madela 529927 30.10.2025	M3
10019	A	No Brake Train Lines Check continuity between END1 90XR15 pin 32 END2 90XP25 pin 32		OK		Mlungisi Madela 529927 30.10.2025	M3
10020	R	Both points are continuous		OK		Mlungisi Madela 529927 30.10.2025	M3
10021	A	Traction Interlock Bypass Train Lines Check continuity between END1 90XR14 pin 6 END2 90XP24 pin 6		OK		Mlungisi Madela 529927 30.10.2025	M3
10022	R	Both points are continuous		OK		Mlungisi Madela 529927 30.10.2025	M3
10023	A	Traction Interlock Train Lines Check continuity between END1 90XR15 pin 41 END2 90XP25 pin 41 and -10XP12_XCB2 pin 8		OK		Mlungisi Madela 529927 30.10.2025	M3
10024	R	All pins are continuous		OK		Mlungisi Madela 529927 30.10.2025	M3
10025	A	110Vdc Normal Traction EL Train Line Remove the connector from 90XP15 End 2		OK		Mlungisi Madela 529927 30.10.2025	M3
10026	I	Coolant Liquid		OK		Mlungisi Madela 529927 30.10.2025	M3
10027	A	Check that the coolant level is atleast 1/2 of the sight glass level indicator [12-42- 59-277668_277624_Coolant Level Check.pdf]		OK		Mlungisi Madela 529927 30.10.2025	M3
10028	R	Coolant Liquid Level is OK		OK		Mlungisi Madela 529927 30.10.2025	M3
10029	I	End of Test		OK		Mlungisi Madela 529927 30.10.2025	M3



Serial Tests Report TS310 – M3 – VFT RTR Vehicle Functional Static Testing Report	Document Reference GIB0000008857 Version: A0	Emission date 10/11/2025
---	--	-----------------------------

Section 16 – Vehicle Normalization

16.1 Climatic Conditions and Test Means

- Environmental conditions:
- Tests means:
- Equipment:

16.2 Description of the tests, characteristics to be measured, observed

16.3 Instructions list

16.3.1 Vehicle Normalization

I - Information A - Action R - Result NE - Not Executed

N°	Type	Instruction	File	Result status	Result value	Operator	Vehicle
10001	R	On LV3 all Connectors are tightened		OK		Amanda Ntuli 526239 05.11.2025	M3
10002	I	Initial Conditions		OK		Amanda Ntuli 526239 05.11.2025	M3
10003	I	The VFT procedures are all completed		OK		Amanda Ntuli 526239 05.11.2025	M3
10004	I	Vehicle Normalization Check		OK		Amanda Ntuli 526239 05.11.2025	M3
10005	R	On LV3 all Circuit Breakers are installed and secured		OK		Amanda Ntuli 526239 05.11.2025	M3
10006	R	On LV3 all Dataplugs are installed, tightened and earth braids are fastened		OK		Amanda Ntuli 526239 05.11.2025	M3
10007	R	On LV3 there are no missing components, device, wiring or connectors.		OK		Amanda Ntuli 526239 05.11.2025	M3
10008	R	On LV6 all Dataplugs are installed, tightened and earth braids are fastened		OK		Amanda Ntuli 526239 05.11.2025	M3
10009	R	On LV6 all Connectors are tightened		OK		Amanda Ntuli 526239 05.11.2025	M3
10010	R	On LV6 there are no missing components, device, wiring or connectors.		OK		Amanda Ntuli 526239 05.11.2025	M3
10011	R	On HC Cubicle the Controller is installed and properly tightened and its connectors are tightened		OK		Amanda Ntuli 526239 05.11.2025	M3
10012	R	All DCUs are properly installed and secured		OK		Amanda Ntuli 526239 05.11.2025	M3
10013	R	All Internal Displays are properly installed and secured		OK		Amanda Ntuli 526239 05.11.2025	M3
10014	R	All Light Covers are properly installed		OK		Vusumuzi Zulu 420115 10.11.2025	M3
10015	R	All Saloon Fire Detectors are properly installed and secured		OK		Amanda Ntuli 526239 05.11.2025	M3
10016	R	All covers are normalised inside the car		OK		Amanda Ntuli 526239 05.11.2025	M3

10017	R	On the Underframe, TBCU Agate is installed and properly tightened		OK		Amanda Ntuli 526239 05.11.2025	M3
10018	R	On the Underframe, Speed Sensors are installed and properly tightened		OK		Amanda Ntuli 526239 05.11.2025	M3
10019	R	On the LVB, all Circuit Breakers are installed and properly tightened		OK		Amanda Ntuli 526239 05.11.2025	M3
10020	R	On the LVB, all Relays and Timers are installed and properly tightened		OK		Amanda Ntuli 526239 05.11.2025	M3
10021	R	On the LVB, BRIOMs are installed and properly tightened		OK		Amanda Ntuli 526239 05.11.2025	M3
10022	R	On the LVB there are no missing components, device, wiring or connectors.		OK		Amanda Ntuli 526239 05.11.2025	M3
10023	R	On the Underframe, all Connectors are tightened		OK		Amanda Ntuli 526239 05.11.2025	M3
10024	R	All underframe covers are normalised		OK		Amanda Ntuli 526239 05.11.2025	M3
10025	R	On END1 the Octopus cables are disconnected from the car and properly stored.		OK		Amanda Ntuli 526239 05.11.2025	M3
10026	R	On END2 the Octopus cables are disconnected from the car and properly stored.		OK		Amanda Ntuli 526239 05.11.2025	M3
10027	R	The Test Bench is switched OFF and the Octopus cables are disconnected and properly stored		OK		Amanda Ntuli 526239 05.11.2025	M3
10028	R	ALL P.Os of this car are closed		OK		Vusumuzi Zulu 420115 10.11.2025	M3
10029	I	End Of Test		OK		Amanda Ntuli 526239 05.11.2025	M3



Serial Tests Report
TS310 – M3 – VFT
RTR Vehicle Functional Static Testing Report

Document Reference
GIB0000008857
Version: A0

Emission date
10/11/2025



Serial Tests Report
TS310 – M3 – VFT
RTR Vehicle Functional Static Testing Report

Document Reference
GIB0000008857
Version: A0

Emission date
10/11/2025

Section 17 – Report summaries

17.1 Vehicle information

Vehicle number : 310 - 292

17.2 Results status

Test Instruction Sheet	Compliant	Incomplete	Non-compliant
Energy Distribution	X		
TCMS Network	X		
Cabin Control	X		
Internal Lighting	X		
PACIS System	X		
Train Ground Communication	X		
Rescue Mode and Emergency Disconnection	X		
Emergency Brake	X		
Service Brake	X		
Holding and Parking Brake	X		
HVAC Air Condition	X		
Fire Protection	X		
Traction and Electric Brake	X		
Passenger Doors	X		
Vehicle Normalization	X		

17.3 Summary statement

Test Instruction Sheet

17.4 Tools used

Function	Tool name	Tool number	Next Calibration date
----------	-----------	-------------	-----------------------

015_NRG	Phasemeter	Phasemeter	11/30/2025
054_PIS	Multimeter	Multimeter 2	9/30/2026
057_HVA	Phasemeter	Phasemeter	11/30/2025
062_ETS	Multimeter	Multimeter 2	9/30/2026
067_FSD	Multimeter	Multimeter 2	9/30/2026

17.5 Software configuration

Vehicle	Equipment	Expected version	Version loaded
---------	-----------	------------------	----------------

17.6 Open Points

Event number	Test Instruction Sheet / Function	Instruction Number	Description	Comments
--------------	-----------------------------------	--------------------	-------------	----------

17.7 Validation

Function	Operator	Date	Signature
015_NRG	Mbavhalelo Funyufunyu - 484649	30/10/2025	Signed Digitally
020_CAB	Mlungisi Madela - 529927	30/10/2025	Signed Digitally
025_NET	Mbavhalelo Funyufunyu - 484649	30/10/2025	Signed Digitally
027_ERM	Mbavhalelo Funyufunyu - 484649	30/10/2025	Signed Digitally
033_TRC	Mlungisi Madela - 529927	30/10/2025	Signed Digitally
040_SBK	Mlungisi Madela - 529927	30/10/2025	Signed Digitally
044_UBK	Mbavhalelo Funyufunyu - 484649	30/10/2025	Signed Digitally
045_PBK	Mlungisi Madela - 529927	30/10/2025	Signed Digitally
050_DOR	Mlungisi Madela - 529927	30/10/2025	Signed Digitally
052_LGT	Mlungisi Madela - 529927	30/10/2025	Signed Digitally
054_PIS	Mlungisi Madela - 529927	30/10/2025	Signed Digitally



Serial Tests Report
TS310 – M3 – VFT
RTR Vehicle Functional Static Testing Report

Document Reference
GIB0000008857
Version: A0

Emission date
10/11/2025

057_HVA	Ntobeko Ndlovu - 421595	31/10/2025	Signed Digitally
057_HVA	Alleta Sekgololo - 417407	31/10/2025	Signed Digitally
062_ETS	Mlungisi Madela - 529927	30/10/2025	Signed Digitally
067_FSD	Mbavhalelo Funyufunyu - 484649	30/10/2025	Signed Digitally
093_NORM	Amanda Ntuli - 526239	05/11/2025	Signed Digitally
093_NORM	Vusumuzi Zulu - 420115	10/11/2025	Signed Digitally

Customer	Date	Signature